

# AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)  
BIRMINGHAM, ALABAMA

AL-50 (FAA)

ATIS 119.4 270.1  
 BIRMINGHAM TOWER 119.9 317.725  
 GND CON 121.7 348.6  
 CLNC DEL 125.675 305.2

D

33°35'N  
 33°34'N  
 33°33'N  
 JANUARY 2015  
 ANNUAL RATE OF CHANGE  
 0.1° W


RWY 06-24  
 PCN 65 F/C/X/T  
 S-175, D-205, 2D-350  
 RWY 18-36  
 PCN 45 F/C/X/T  
 S-75, D-170, 2D-240

RESTRICTED ACCESS (prior approval only)

FIELD ELEV 650

SE-4, 15 AUG 2019 to 12 SEP 2019

SE-4, 15 AUG 2019 to 12 SEP 2019

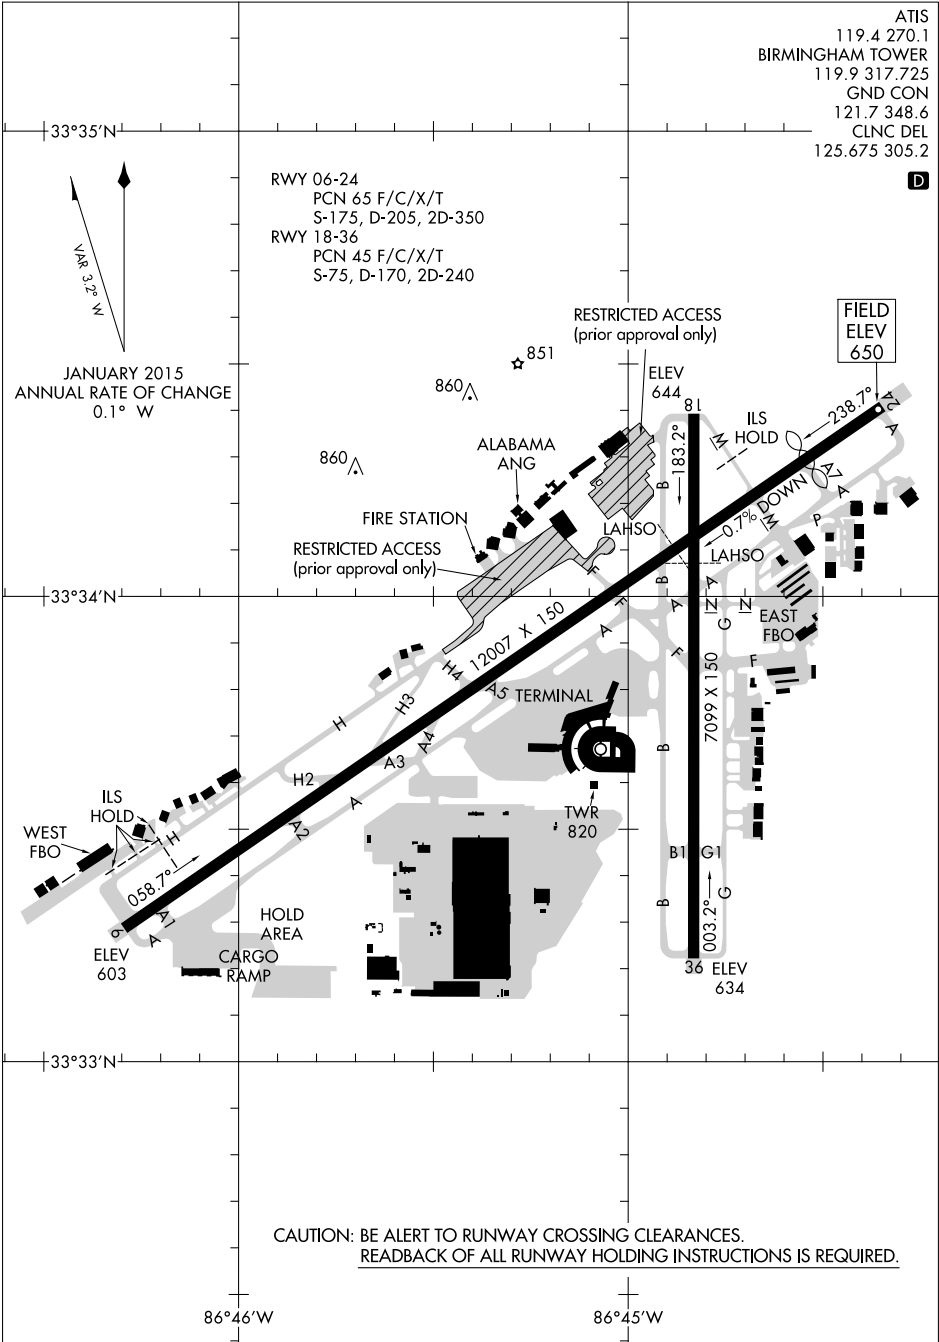

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
 READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

# AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA  
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)