

AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)
BIRMINGHAM, ALABAMA

AL-50 (FAA)

ATIS 119.4 270.1
 BIRMINGHAM TOWER 119.9 317.725
 GND CON 121.7 348.6
 CLNC DEL 125.675 305.2

D

33°35'N
 33°34'N
 33°33'N
 JANUARY 2015
 ANNUAL RATE OF CHANGE
 0.1° W


RWY 06-24
 PCN 65 F/C/X/T
 S-175, D-205, 2D-350
 RWY 18-36
 PCN 45 F/C/X/T
 S-75, D-170, 2D-240

RESTRICTED ACCESS (prior approval only)

FIELD ELEV 650

SE-4, 12 SEP 2019 to 10 OCT 2019

SE-4, 12 SEP 2019 to 10 OCT 2019

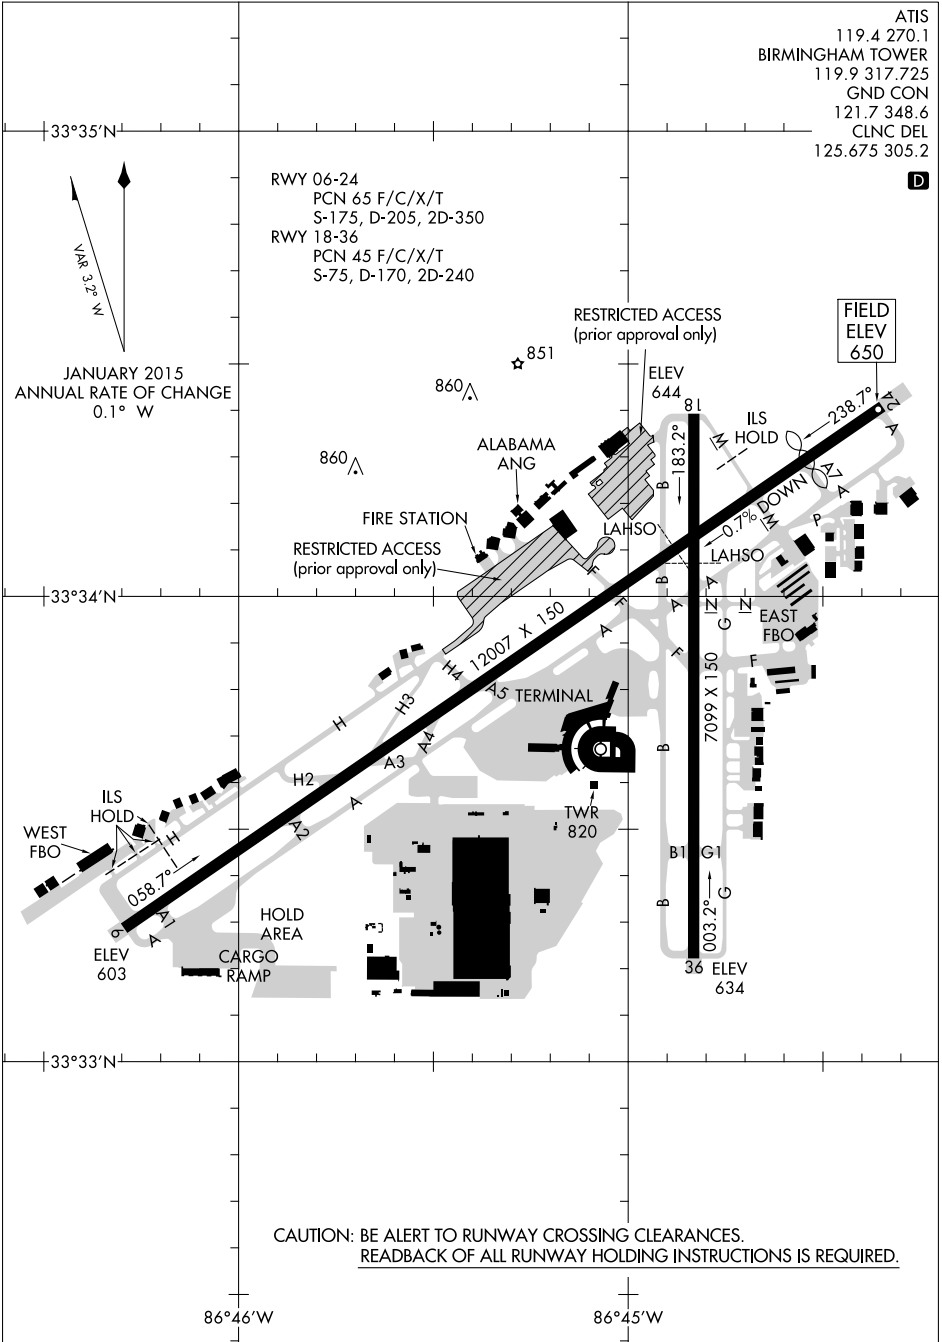

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
 READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)