

# AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)  
AL-50 (FAA)  
BIRMINGHAM, ALABAMA

ATIS  
119.4 270.1  
BIRMINGHAM TOWER  
119.9 317.725  
GND CON  
121.7 348.6  
CLNC DEL  
125.675 305.2

D

RWY 06-24  
PCN 65 F/C/X/T  
S-175, D-205, 2D-350  
RWY 18-36  
PCN 45 F/C/X/T  
S-75, D-170, 2D-240

33°35'N  
33°34'N  
33°33'N  
MAG. VAR. 3.6° W  
JANUARY 2020  
ANNUAL RATE OF CHANGE  
0.1° W

RESTRICTED ACCESS  
(prior approval only)

FIELD  
ELEV  
650

ELEV 644

183.6°

ILS HOLD

0.7% DOWN

239.1°

LAHSO

LAHSO

EAST FBO

7099 X 150

003.6°

36 ELEV 634

81

12007 X 150

ALABAMA ANG

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

LAHSO

860  
860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

860

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

86°46'W

86°45'W

# AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA  
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)

SE-4, 09 SEP 2021 to 07 OCT 2021

SE-4, 09 SEP 2021 to 07 OCT 2021