 


AIRPORT DIAGRAM

[USN]

ATIS 124.35 290.425
 NAVY JACKSONVILLE TOWER
 125.15 (CTAF) 340.2
 GND CON
 128.6 336.4
 CLNC DEL
 134.775 353.675

30°15'N



OCTOBER 2019
 ANNUAL RATE OF CHANGE
 0.1° W

NORTH-SOUTH REF LINE

FLYING CLUB

FIELD
 ELEV
 23

CALA

C

D

D1

C1

C

COMPASS ROSE

FIRE STATION

30°14'N

095.7° ← E-28

9003 x 200

← 275.7° E-28

ELEV 8

28

1000

x 100

10

A1

A2

A3

A4

A5

A6

A7

B

A1

A2

F

C

A4

A

A5

A6

A

H

A7

B

2

1

ELEV 10

10

511

VP-30 HANGAR

HOT REFUEL PITS

HANGAR 1000

Rwy 10-28

PCN 66 F/A/W/T

Rwy 14-32

PCN 30 F/B/W/T

Rwy 10 ldg 8006'

Rwy 14 ldg 3244'

30°13'N

81°41'W

81°40'W

180

WATER TOWERS

P-3 WASHRACK

HANGARS

116

1002

117

1122

124

140

PAX TRML

HOT REFUEL PIT

CONTROL TOWER/ BASE OPS

HELO WASHRACK

FRC HANGAR

AIRPORT DIAGRAM