

AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

AL-804 (FAA)

BALTIMORE, MARYLAND

D-ATIS
115.1 127.8
BALTIMORE TOWER
119.4 257.8
GND CON
121.9
CLNC DEL
118.05
CPDLC
PDC

D

76°41'W

76°40'W

76°39'W

RWY 10-28

PCR 759 F/A/X/T
S-80, D-220, 2D-1020, 2D/2D2-1340

RWY 15L-33R

PCR 269 F/A/X/T
S-30, D-45

RWY 15R-33L

PCR 759 F/A/X/T
S-80, D-220, 2D-675, 2D/2D2-890

39°12'N

JANUARY 2025
ANNUAL RATE OF CHANGE
0.0° E

VAR 11.0° N

AIR CARGO

GENERAL
AVIATION
PARKING

DE-ICE

DE-ICING
AREAALTERNATE
DE-ICING
PAD

U.S. CUSTOMS

TWR

MAINTENANCE

FIELD
ELEV
143ELEV
139ELEV
114ELEV
126ELEV
130

MID-FIELD CARGO COMPLEX

FIRE
STATION

APRON

ASDE-X in use. Operate transponders
with altitude reporting mode and ADS-B
(if equipped) enabled on all airport surfaces.

Runway Status Lights in operation.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

HIRL Rwy 15L-33R, 15R-33L and 10-28
REIL Rwy 15L and 33R
TDZ/CL Rwy 33L and 10

AIRPORT DIAGRAM

BALTIMORE, MARYLAND

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

25163

NE-3, 10 JUL 2025 to 07 AUG 2025


NE-3, 10 JUL 2025 to 07 AUG 2025

AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

AL-804 (FAA)

BALTIMORE, MARYLAND

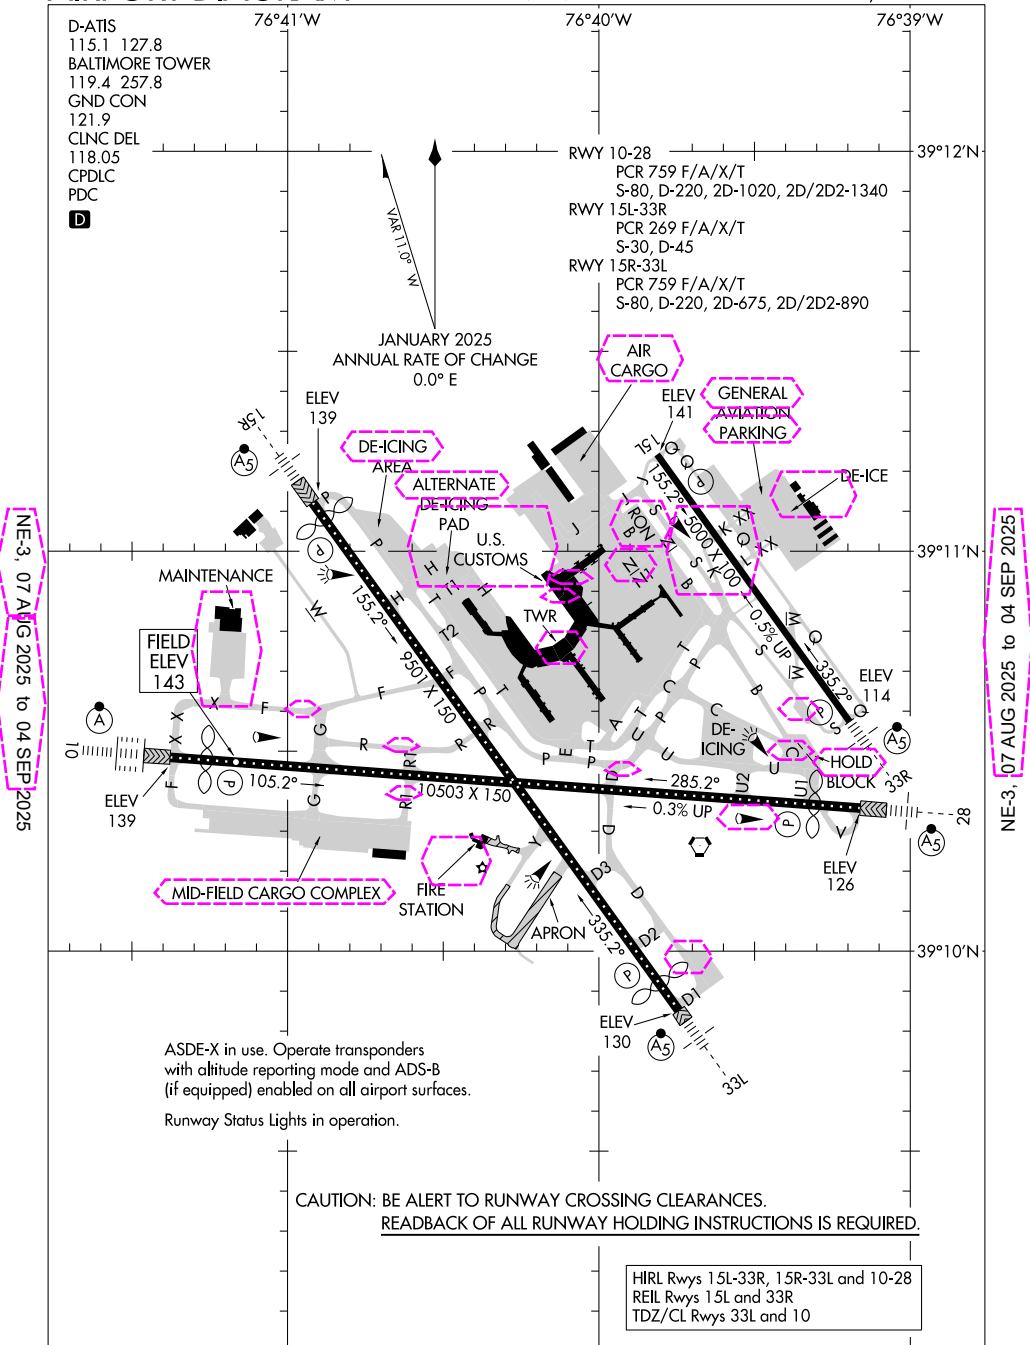

AIRPORT DIAGRAM

BALTIMORE, MARYLAND
BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

25219