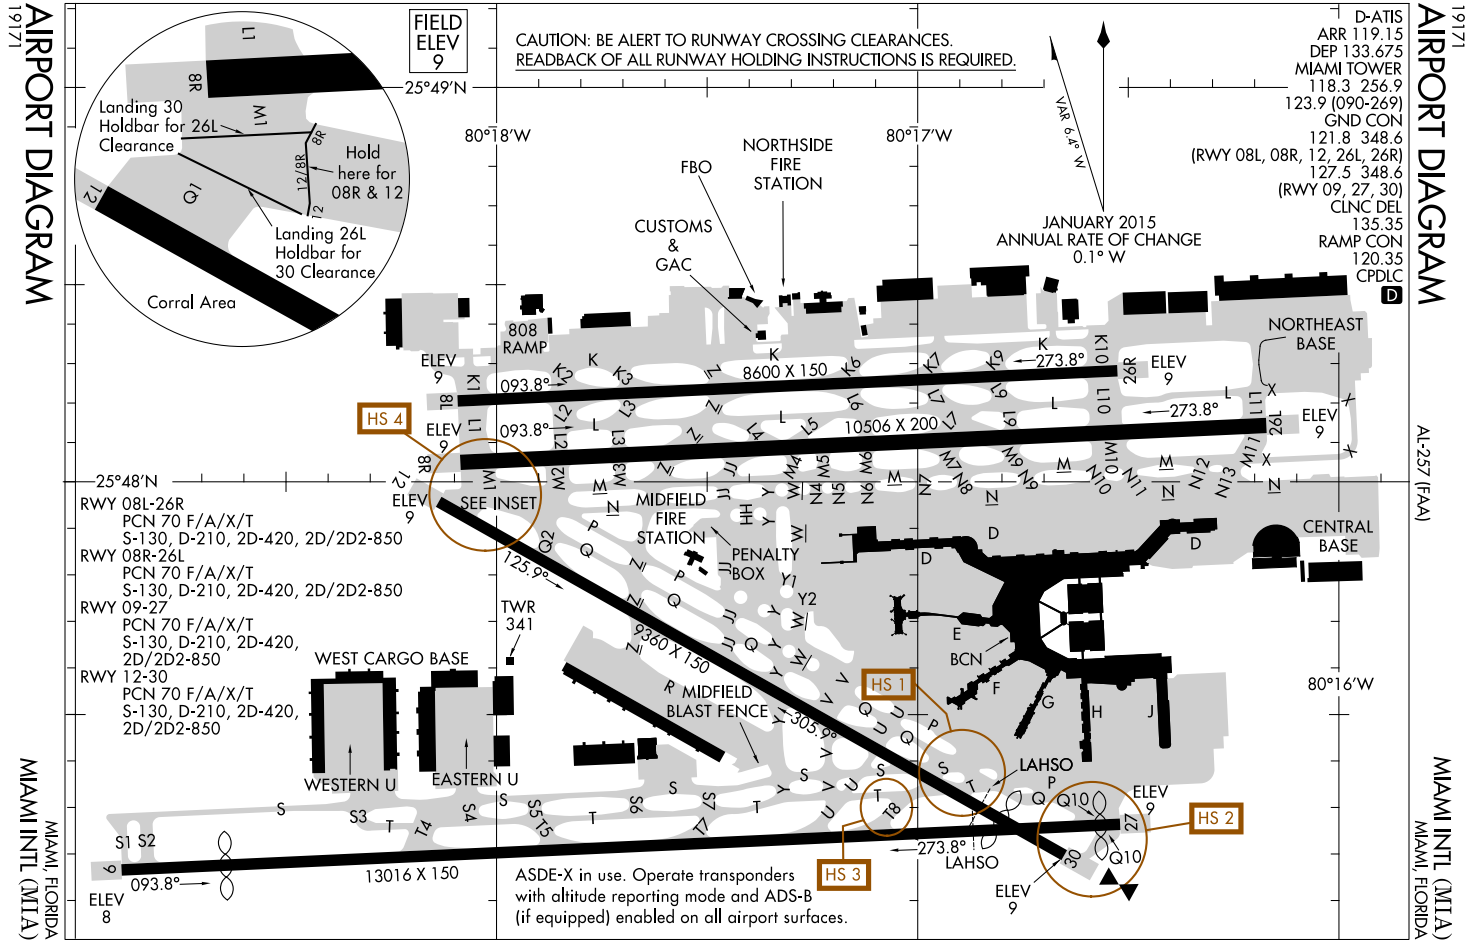
AIRPORT DIAGRAM
19171
MIAMI INTL (MIA)
MIAMI, FLORIDA
FIELD ELEV 9
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
D-ATIS
ARR 119.15
DEP 133.675
MIAMI TOWER
118.3 256.9
123.9 (090-269)
GND CON
121.8 348.6
(RWY 08L, 08R, 12, 26L, 26R)
127.5 348.6
(RWY 09, 27, 30)
CLNC DEL
135.35
RAMP CON
120.35
CPDLC
D
25°49'N
25°48'N
80°18'W
80°17'W
80°16'W
VAR 6.4° W
JANUARY 2015
ANNUAL RATE OF CHANGE
0.1° W
FBO
NORTHSIDE FIRE STATION
CUSTOMS & GAC
808 RAMP
NORTHEAST BASE
CENTRAL BASE
MIDFIELD FIRE STATION
PENALTY BOX
TWR 341
WEST CARGO BASE
WESTERN U
EASTERN U
MIDFIELD BLAST FENCE
BCN
LAHSO
HS 1
HS 2
HS 3
HS 4
SEE INSET
Landing 30 Holdbar for 26L Clearance
Hold here for 08R & 12
Landing 26L Holdbar for 30 Clearance
Corral Area
8600 X 150
10506 X 200
9360 X 150
13016 X 150
093.8°
125.9°
273.8°
305.9°
ELEV 9
ELEV 8
RWY 08L-26R
PCN 70 F/A/X/T
S-130, D-210, 2D-420, 2D/2D2-850
RWY 08R-26L
PCN 70 F/A/X/T
S-130, D-210, 2D-420, 2D/2D2-850
RWY 09-27
PCN 70 F/A/X/T
S-130, D-210, 2D-420, 2D/2D2-850
RWY 12-30
PCN 70 F/A/X/T
S-130, D-210, 2D-420, 2D/2D2-850
ASDE-X in use. Operate transponders with altitude reporting mode and ADS-B (if equipped) enabled on all airport surfaces.
AL-257 (FAA)