








LOC I-OTM <b>109.5</b>	APP CRS <b>312°</b>	Rwy Idg <b>5885</b> TDZE <b>841</b> Apt Elev <b>845</b>
---------------------------	------------------------	---

ILS or LOC RWY 31  
OTTUMWA RGNL (OTM)


 DME required. Autopilot coupled approach NA below 1160.	 MALSR	MISSED APPROACH: Climb to 1500 then climbing right turn to 2800 direct OTM VOR/DME and hold.
--	---	--

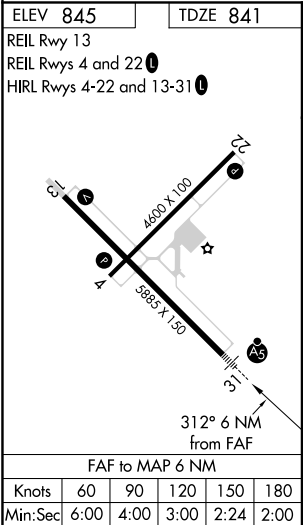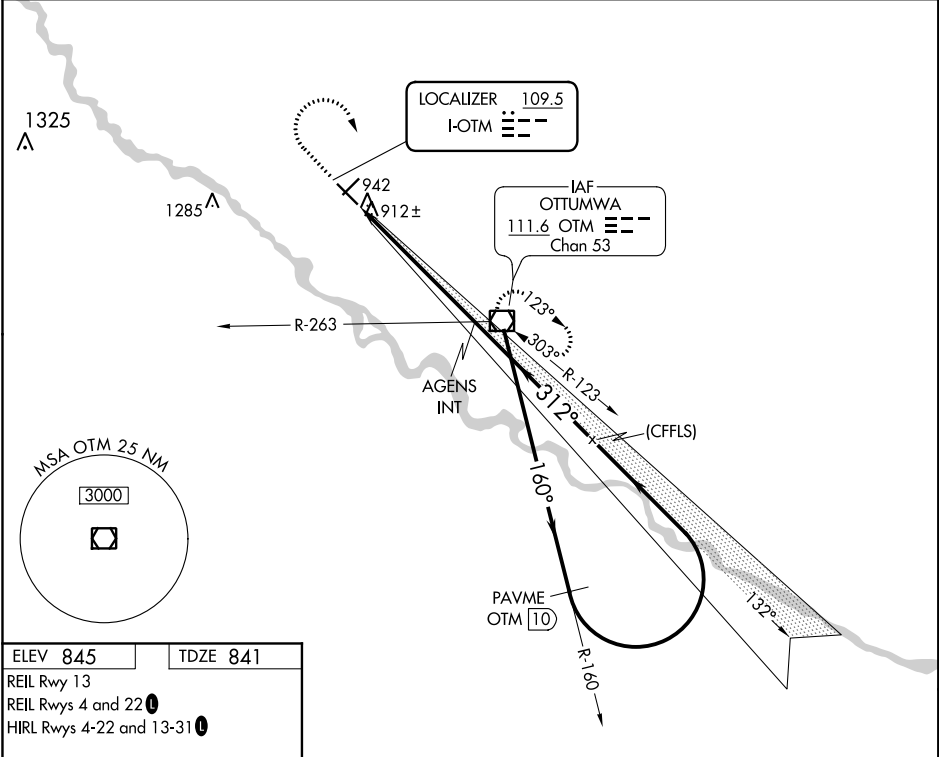ASOS <b>124.175</b>	CHICAGO CENTER <b>118.15 354.1</b>	UNICOM <b>123.0 (CTAF) 0</b>
------------------------	---------------------------------------	---------------------------------



1500	2800	OTM	OTM VOR/DME	Teardrop Left Turn
			AGENS INT 2800	
CATEGORY	A	B	C	D
S-ILS 31	1044-½	203 (200-½)		NA
S-LOC 31	1180-½	339 (400-½)		NA
CIRCLING	1260-1 415 (500-1)	1300-1 455 (500-1)	1300-1½ 455 (500-1½)	NA

KOTM  
Ottumwa Rgnl  
Ottumwa, IA  
1:100k  
Circling - all procedures

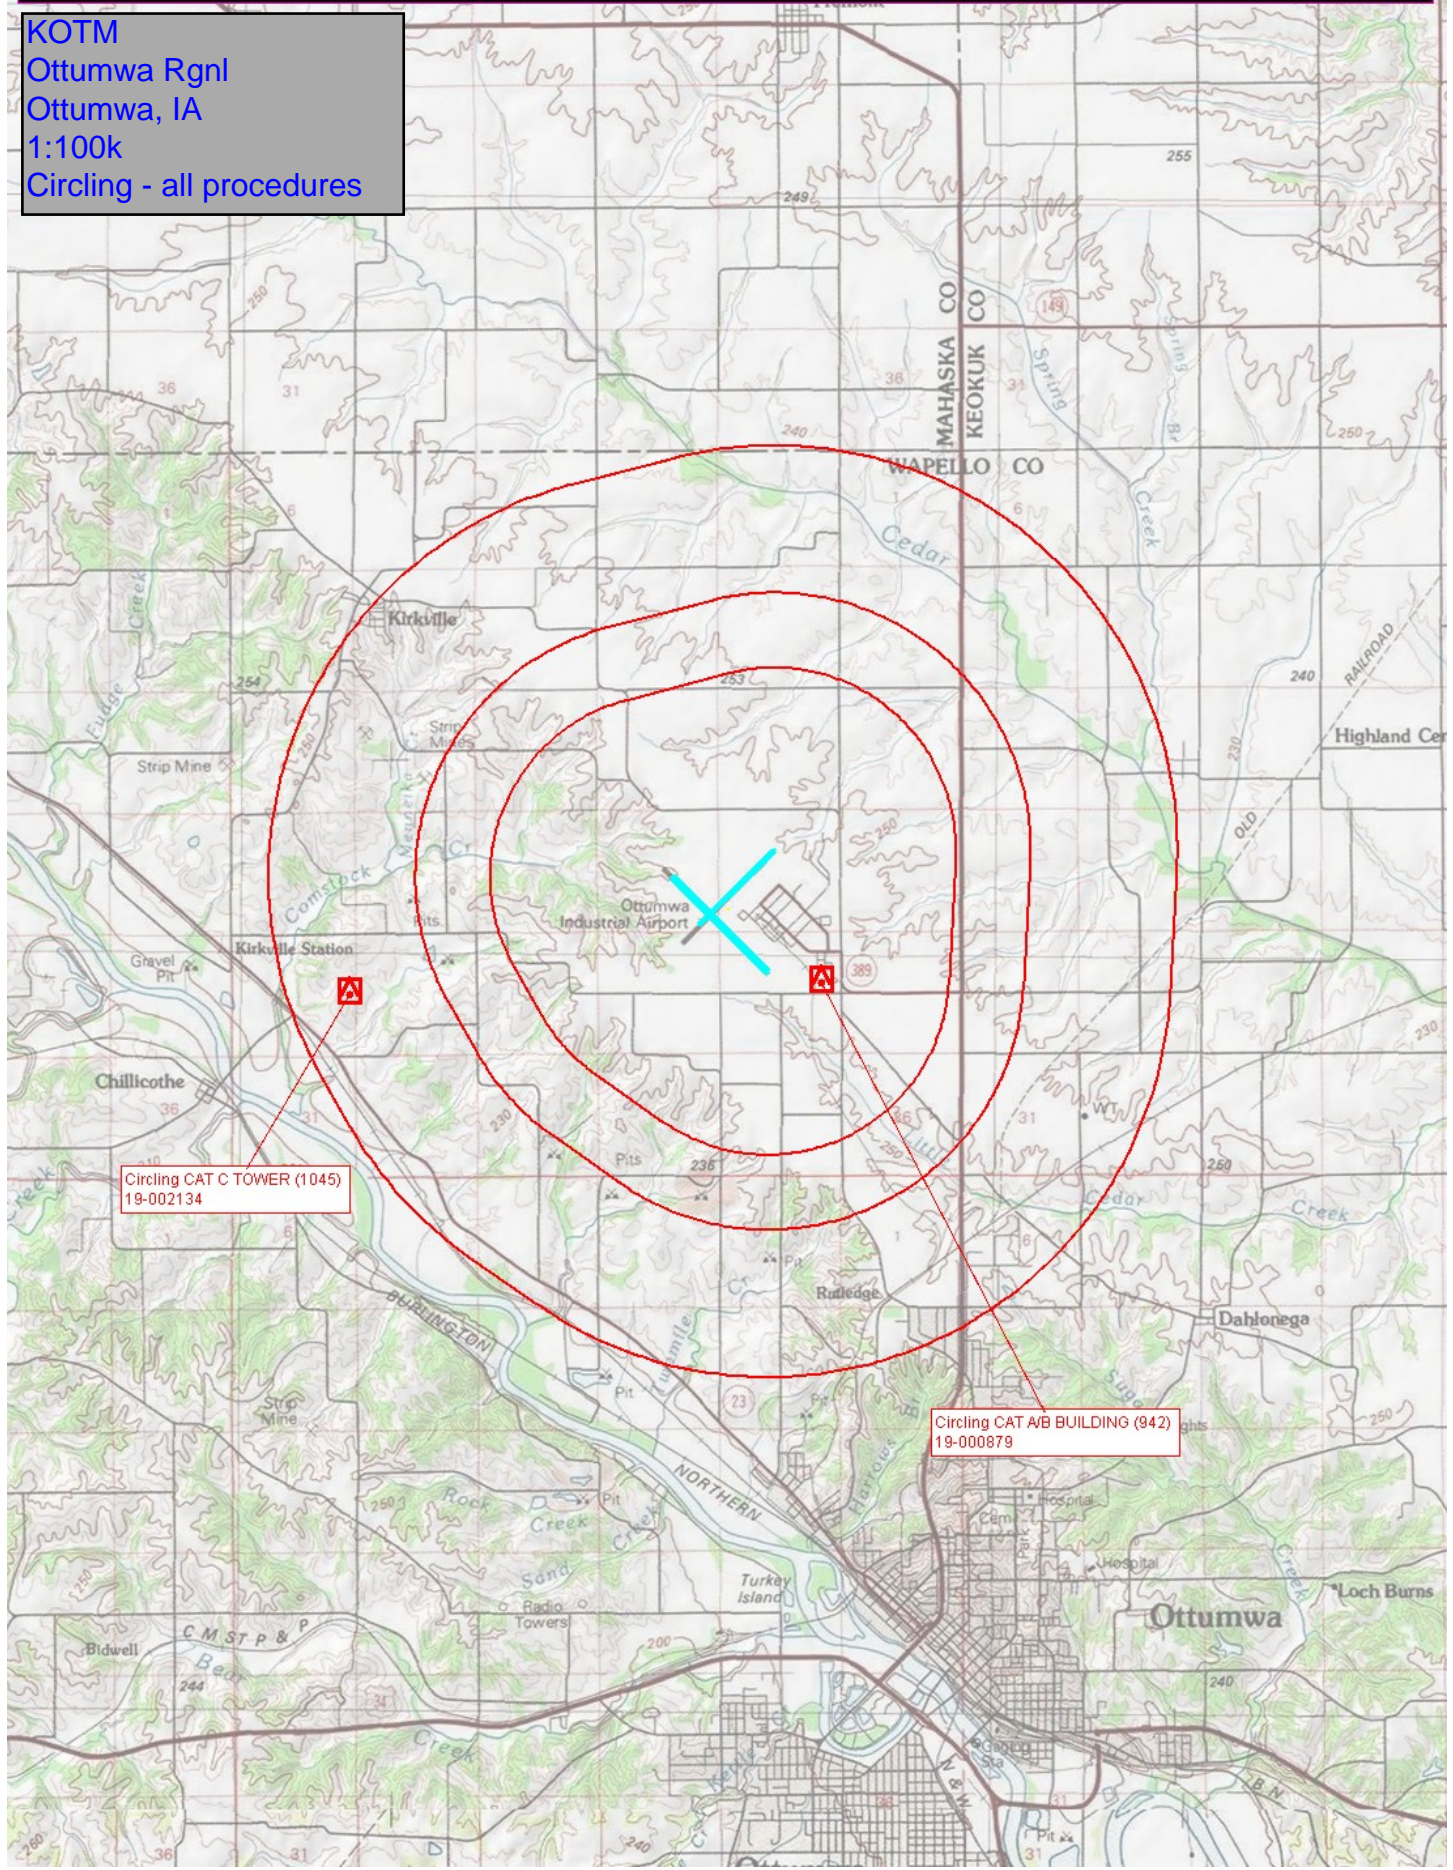

Circling CAT C TOWER (1045)  
19-002134

Circling CAT A/B BUILDING (942)  
19-000879