


LOC/DME I-ACY	APP CRS	Rwy Idg	10000
109.10	308°	TDZE	64
Chan 28		Apt Elev	75

ILS or LOC/DME RWY 31

ATLANTIC CITY INTL (ACY)

<p>ASR</p>	<p>MISSED APPROACH: Climb to 500 then climbing right turn to 2000 via heading 130° and via ACY R-090 to SMITS INT/ACY 11 DME and hold.</p>			
------------	--	--	--	--


ATIS	ATLANTIC CITY APP CON	ATLANTIC CITY TOWER	GND CON	CLNC DEL
125.725 316.15	124.6 327.125	120.3 239.0	121.9 284.6	127.85 353.775

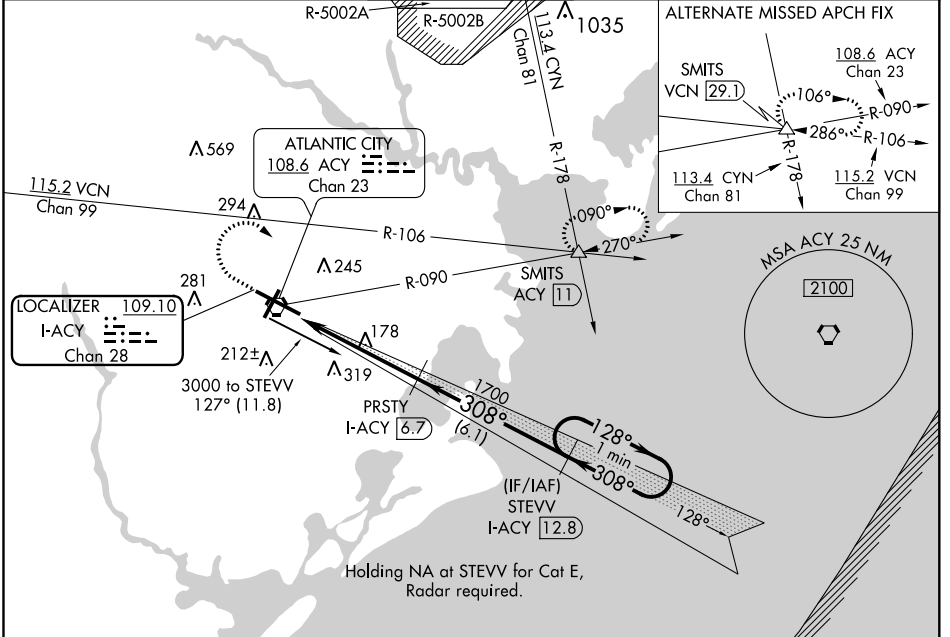

NE-2, 25 MAR 2021 to 22 APR 2021

NE-2, 25 MAR 2021 to 22 APR 2021

ELEV 75	D	TDZE 64
---------	----------	---------

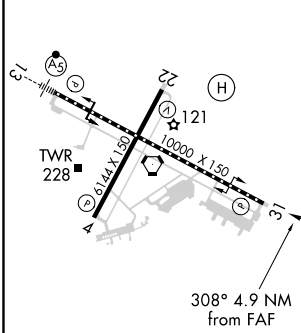

TDZ/CL Rwy 13
HIRL Rws 4-22 and 13-31
REIL Rwy 31

DME REQUIRED

500	2000	ACY R-090	SMITS	Use I-ACY DME when on localizer course. VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 69).	STEVV I-ACY [12.8]	One Minute Holding Pattern
CATEGORY		A	B	C	D	E
S-ILS 31		264/40 200 (200-¾)				
S-LOC 31		520/50	456 (500-1)	520/60 456 (500-1¼)	520-1½	456 (500-1½)
CIRCLING		540-1	465 (500-1)	540-1½ 465 (500-1½)	640-2	760-2½ 685 (700-2½)