


# THRNE THREE ARRIVAL (RNAV) Transition Route


AL-67 (FAA)

BURBANK, CALIFORNIA

- SOCAL APP CON  
126.7 370.95
- BUR D-ATIS  
134.5
- SMO ATIS  
119.15
- VNY ATIS  
127.55
- BURBANK TOWER  
118.7 254.3
- SANTA MONICA TOWER ★  
120.1 257.8
- VAN NUYS TOWER ★  
119.3 239.0



See following page  
for Arrival Routes.

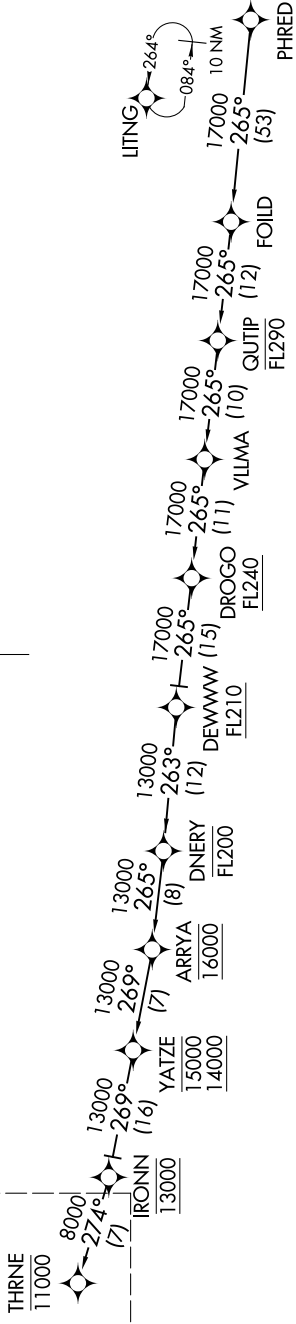

PHRED TRANSITION (PHRED.THRNE3)

- NOTE: RADAR required.
- NOTE: RNAV 1.
- NOTE: DME/DME/IRU or GPS required.
- NOTE: Turbojet and turboprop aircraft only.
- NOTE: Expect local area altimeter setting reaching FL200.

NOTE: Chart not to scale.

(CONTINUED ON FOLLOWING PAGE)

# THRNE THREE ARRIVAL (RNAV) Transition Route

BURBANK, CALIFORNIA