
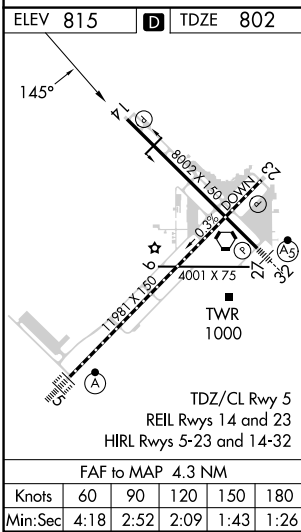


VORTAC FWA 117.8 Chan 125	APP CRS 145°	Rwy Idg TDZE Apt Elev	8001 802 815
---	------------------------	-----------------------------	---

VOR or TACAN RWY 14

FORT WAYNE INTL (FWA)

DME or RADAR required.		MISSED APPROACH: Climb to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.		
ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75

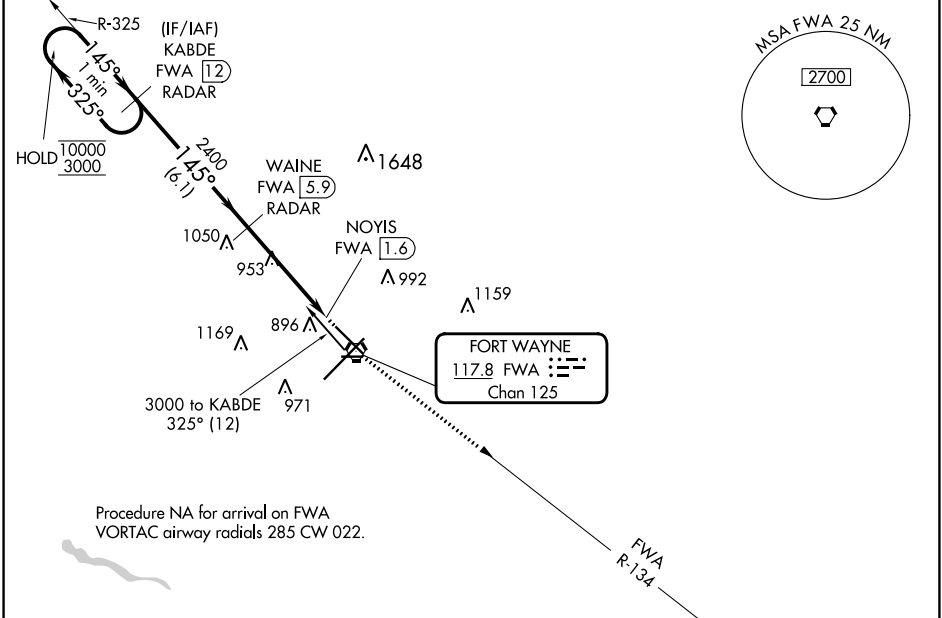

One Minute Holding Pattern	KABDE FWA 12 RADAR	WAINE FWA 5.9 RADAR	3000	FWA R-134	OSBER
10000 ← 325°	145° →	145°	2400	NOYIS FWA 1.6	OSBER
		3.05°	TCH 53	0.9	0.5
		6.1 NM	3.4 NM		

EC-2, 11 JUL 2024 to 08 AUG 2024

EC-2, 11 JUL 2024 to 08 AUG 2024