

HI-VOR or TACAN RWY 31

RICK HUSBAND AMARILLO INTL (KAMA)

DME required

T When local altimeter setting not received, use Borger altimeter setting.

MISSED APPROACH: Climbing left turn to 5300 on PNH VORTAC R-176 to JLPY/PNH 11 DME and hold.

ATIS
118.85 350.3



AMARILLO APP CON
119.5 307.0

AMARILLO TOWER ★
118.3 (CTAF) **L** 257.9


GND CON
121.9 348.6




CLNC DEL
121.65 239.275

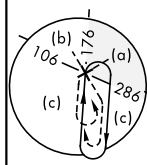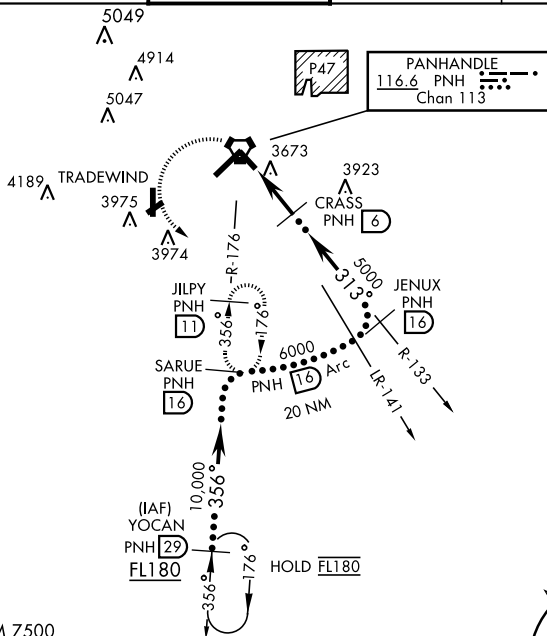
ASR

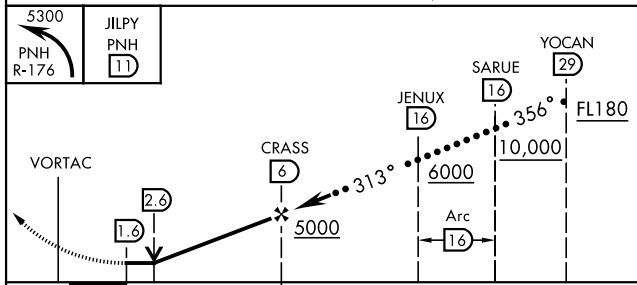

EMERG SAFE ALT 100 NM 7500



			
CATEGORY	C	D	E
S-31	3960-1 359 (400-1)	3960-1¼ 359 (400-1¼)	
 CIRCLING	4240-1¾ 633 (500-1¾)	4280-2¼ 673 (700-2¼)	4460-3 853 (900-3)
BORGER ALTIMETER SETTING			
S-31	4120-1⅝	519	(600-1⅝)
 CIRCLING	4400-2½ 793 (800-2½)	4440-2¾ 833 (900-2¾)	4620-3 1013 (1100-3)

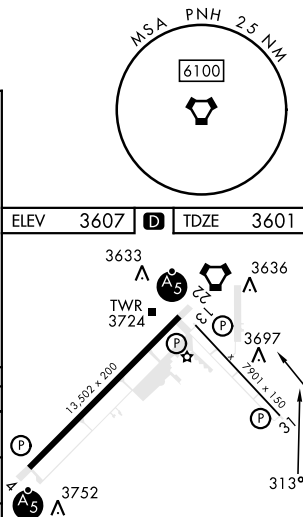

HIRL all rwys **L**
REIL Rwy 13 **L**

AMARILLO, TEXAS

35°13'N-101°42'W

RICK HUSBAND AMARILLO INTL (KAMA)

HI-VOR or TACAN RWY 31