


WAAS CH 70710 W09A	APP CRS 092°	Rwy Idg TDZE Apt Elev	6502 147 147
--	------------------------	-----------------------------	---

RNAV (GPS) RWY 9

FLORENCE RGNL (F'L.O)

RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 2000 direct ESVAC and hold.		
⚠ For uncompensated Baro-VNAV systems, LNAV/VNAV NA below -7°C or above 54°C. Circling Rwy 1, 19 NA at night.					
ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 0 353.85	GND CON 121.9 353.85	CLNC DEL 121.9 353.85	UNICOM 122.95

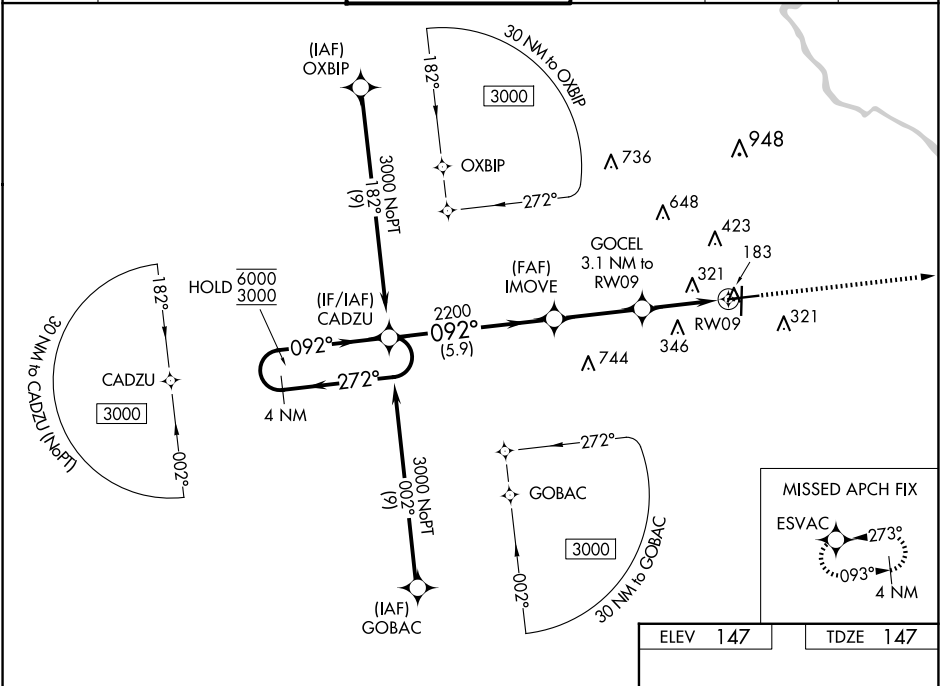

4 NM Holding Pattern CADZU		2000	ESVAC		
6000 ← 272° 3000 → 092°		IMOVE	GOCEL		
GP 3.00° TCH 59		2200	3.1 NM to RW09	1.2 NM to RW09	
5.9 NM		3.2 NM	1.9 NM	1.2 NM	
CATEGORY	A	B	C	D	
LPV DA		347-1/2	200 (200-1/2)		
LNAV/VNAV DA		603-7/8	456 (500-7/8)		
LNAV MDA	580-1/2	433 (500-1/2)	580-3/4	433 (500-3/4)	
CIRCLING	640-1 493 (500-1)	660-1 513 (600-1)	900-2 1/4 753 (800-2 1/4)	900-2 1/2 753 (800-2 1/2)	