


ILS or LOC RWY 32R
EPPLEY AIRFIELD (OMA)

MISSED APPROACH: Climb to 1800 then climbing right turn to 3000 direct OVR VORTAC and hold.

DME or RADAR REQUIRED

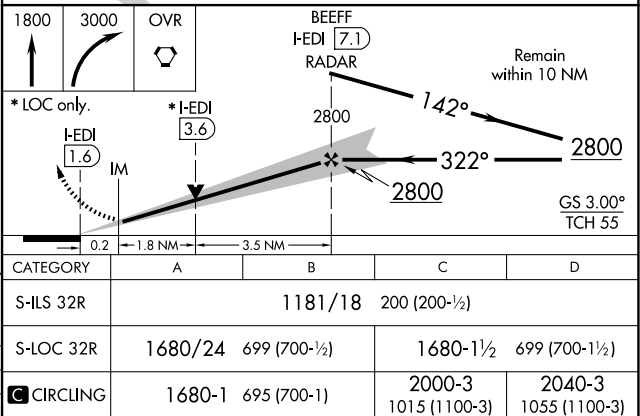

EPPLEY AIRFIELD (OMA)
ILS or LOC RWY 32R