

LOC I-BAF	APP CRS	Rwy Ldg	8919
111.9	204°	TDZE	270
		Apt Elev	270

ILS or LOC RWY 20

WESTFIELD-BARNES RGNL (BAF')

⚠

⚠

⚠

-20°C

Circling Rwy 15 NA at night. DME from BAF VORTAC. DME use requires simultaneous reception of I-BAF and BAF DME. For inop ALS, increase S-ILS 20 Cat E visibility to RVR 4000; increase S-LOC 20 Cat E visibility to 3 SM; increase PETGE fix minimums S-LOC 20 Cat E visibility to 1½ SM.


MALSR

⚠

⚠

MISSED APPROACH: Climb to 1300 then climbing right turn to 4000 direct CTR VOR/DME and hold, continue climb-in-hold to 4000.

ATIS	BRADLEY APP CON	WESTFIELD TOWER ★	GND CON	CLNC DEL
127.1 263.15	125.35 281.5	125.075 (CTAF) 251.1	121.7 289.4	121.7

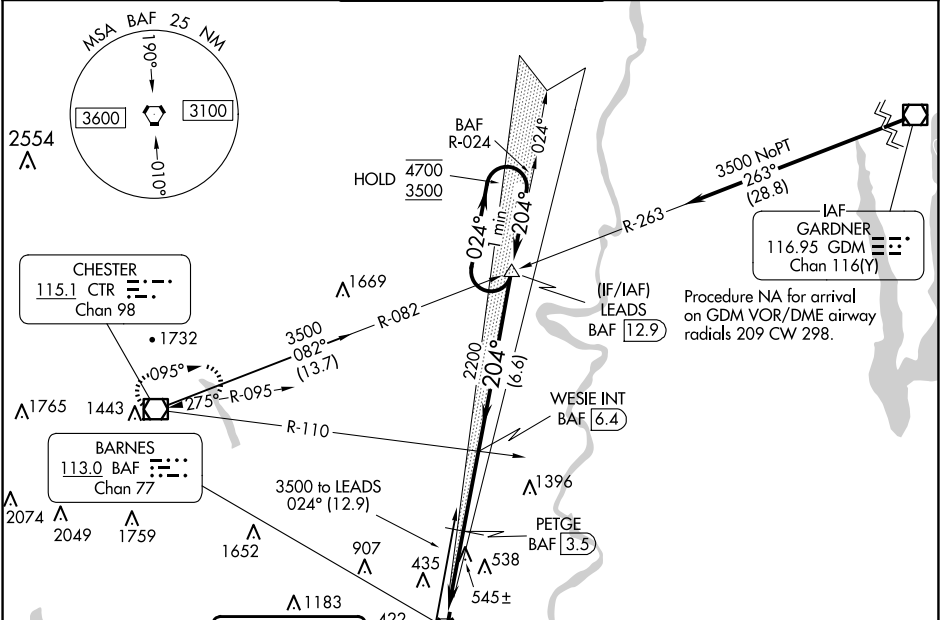

1300

4000

CTR

* LOC only.

WESIE INT BAF 6.4

LEADS BAF 12.9

One Minute Holding Pattern

BAF 0.5

BAF 2

PETGE BAF 3.5

2200

204°

2200

GS 3.00°

TCH 50

1.5 NM

1.5 NM

2.9 NM

6.6 NM

CATEGORY	A	B	C	D	E
S-ILS 20	520/24 250 (300-1½)				
S-LOC 20	1260/40 990 (1000-¾)	1260/55 990 (1000-1)	1260-2½ 990 (1000-2½)		
CIRCLING	1260-1¼ 990 (1000-1¼)	1260-1½ 990 (1000-1½)	1260-3 990 (1000-3)	1660-3 1390 (1400-3)	
PETGE FIX MINIMUMS (DME REQUIRED)					
S-LOC 20	800/24	530 (600-½)	800/55	530 (600-1)	
CIRCLING	1160-1¼	890 (900-1¼)	1160-2¾ 890 (900-2¾)	1660-3 1390 (1400-3)	

