

HI-TACAN Z RWY 31

**T** \*When ALS inop, increase CAT CDE RVR to 55, vis to 1 mile.  
\*\*Circling not authorized N of Rwy 13-31.

ALSF-1

**MISSED APPROACH:** Climb to 3000 via  
OFF TACAN R-302 to SARPY and hold.



ATIS  
126.025 273.5

OMAHA APP CON	
124.5 263.0	(E)
135.875 354.05	(W)


TOWER  
123.7 279.625

GND CON  
121.7 289.4

**CAUTION:** When circling to Rwy 13 at night, operational VGSI required, remain on or above VGSI glidepath until threshold.

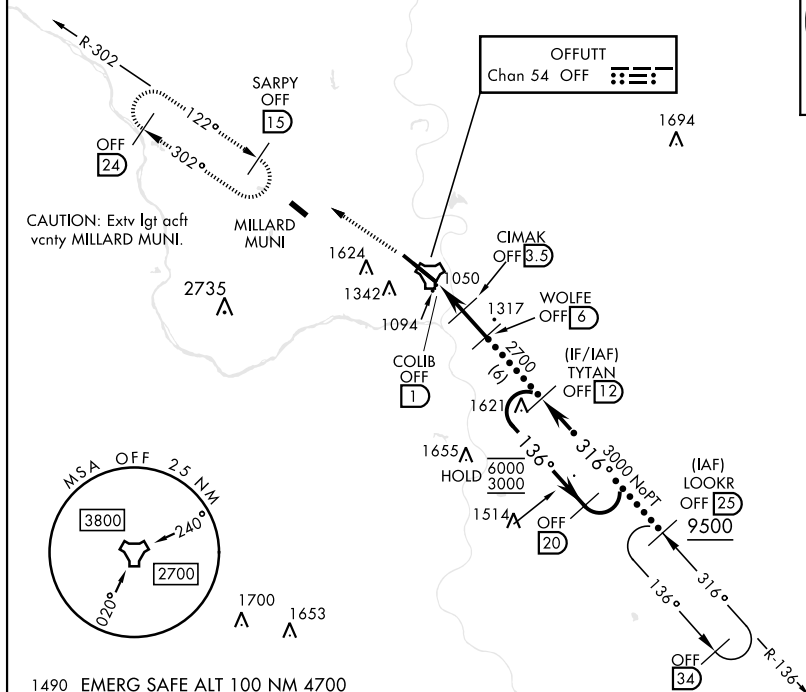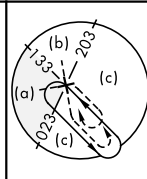


1490 EMERG SAFE ALT 100 NM 4700

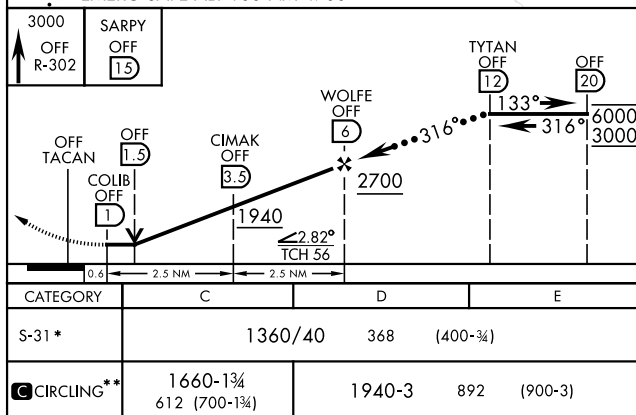

ELEV	1048		TDZE	991
------	------	--	------	-----

Rwy 13 Idg 10,695  
Rwy 31 Idg 10,612

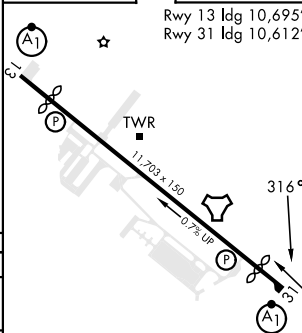

HIRL Rwy 13-31  
Rwy 13-31 ALS nstd

## HI-TACAN Z RWY 31