


RNAV 1-DME/DME/IRU or GPS.
RADAR required.

MIAMI APP CON
133.775 371.9
FLL D-ATIS
135.0
FXE ATIS
119.85
PMP ATIS
120.55

NOTE: Jet aircraft only.
NOTE: Do not file PCOCK, FEDRR,
or CLEOO Transitions - to be
assigned by ATC.
NOTE: SABEE Transition for TPA
area airports only.

ACORI TRANSITION (ACORI.TEEKY3)
CLEOO TRANSITION (CLEOO.TEEKY3)
DEFUN TRANSITION (DEFUN.TEEKY3)
ENEME TRANSITION (ENEME.TEEKY3)
FEDRR TRANSITION (FEDRR.TEEKY3)
MARCI TRANSITION (MARCI.TEEKY3)
PCOCK TRANSITION (PCOCK.TEEKY3)
SABEE TRANSITION (SABEE.TEEKY3)
VNECK TRANSITION (VNECK.TEEKY3)
ZPLEN TRANSITION (ZPLEN.TEEKY3)

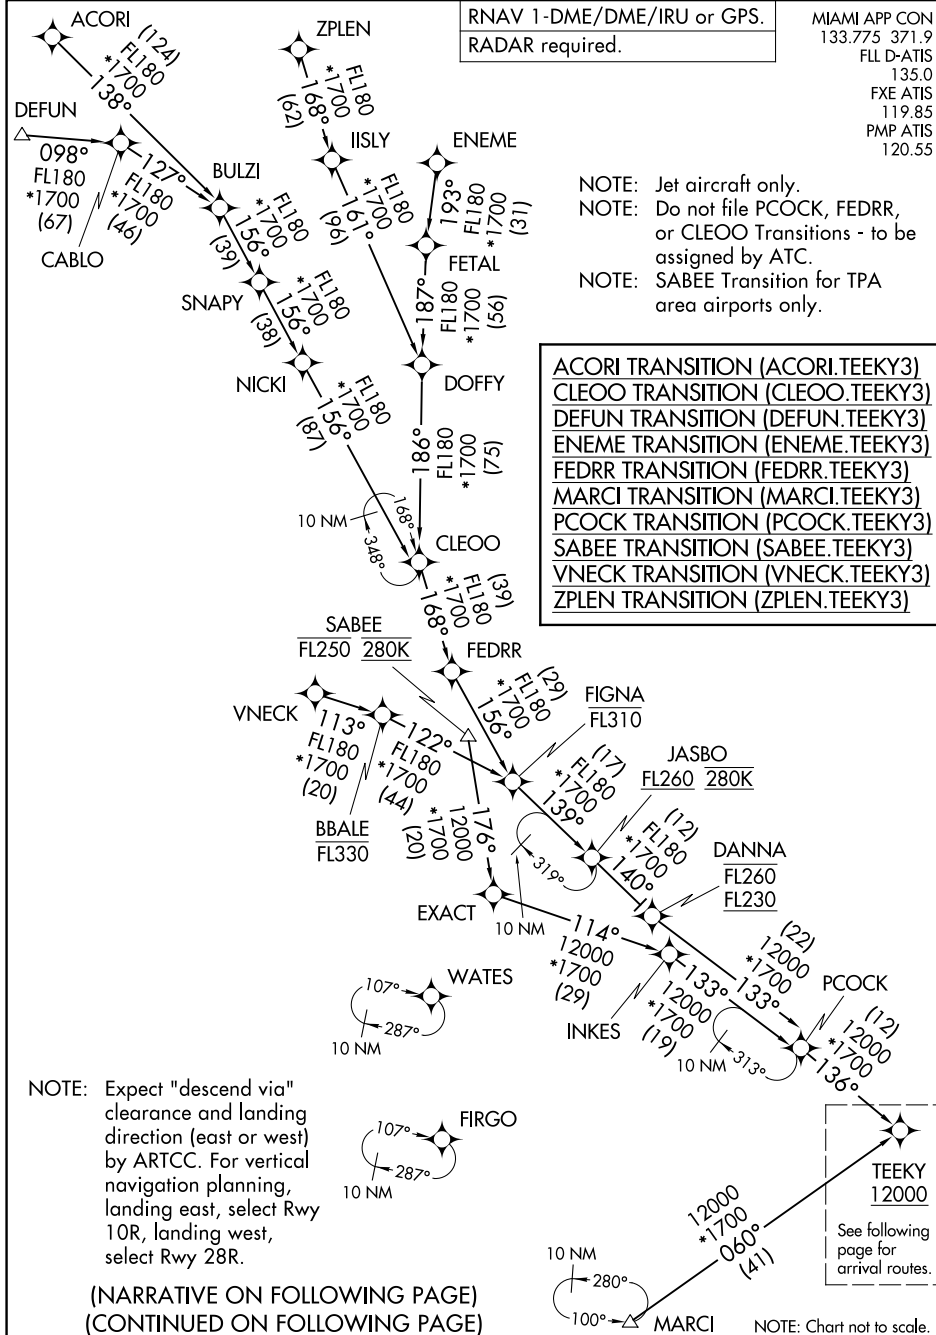

TEEKY THREE ARRIVAL (RNAV) Transition Routes FORT LAUDERDALE, FLORIDA
(TEEKY.TEEKY3) 03NOV22