



LOC/DME	I-RUT	APP CRS	Rwy Idg	5004
111.7		194°	TDZE	787
Chan 54			Apt Elev	787

ILS Y or LOC Y RWY 19

RUTLAND/SOUTHERN VERMONT RGNL (RUT)

DME required.	MALSRR	MISSED APPROACH: Climb to 2840 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE/I-RUT 16.3 DME and hold.
<div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div></div> <div><div>Circling to Rwy 13, 31 NA at night.</div><div>Circling NA northeast of Rws 19 and 31.</div><div>Inop table does not apply to S-ILS 19 all Cats, S-LOC 19 Cats C/D.</div></div>	<div><div></div><div></div><div></div></div>	

AWOS-3PT	BOSTON CENTER	UNICOM
118.375	135.7 282.2	122.8 (CTAF) 0

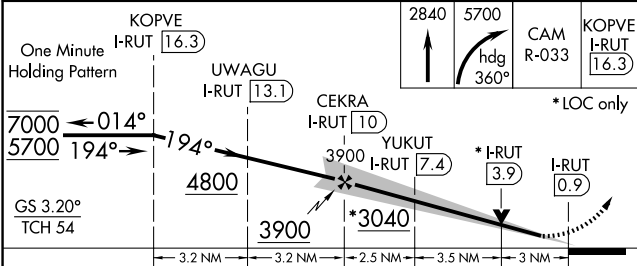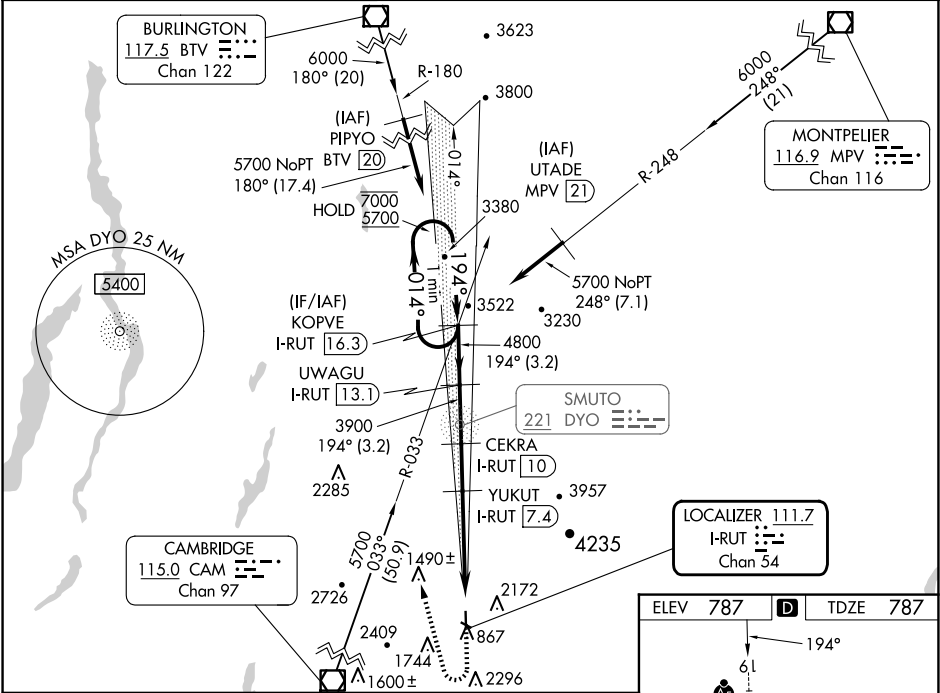

CATEGORY	A	B	C	D
S-ILS 19	2162-5	1375 (1400-5)		
S-LOC 19	2160-3/4 1373 (1400-3/4)	2160-1 1373 (1400-1)	2160-3 1373 (1400-3)	
CIRCLING	2160-1 1/4 1373 (1400-1 1/4)	2160-1 1/2 1373 (1400-1 1/2)	2520-3 1733 (1800-3)	2760-3 1973 (2000-3)

