

VOR or TACAN RWY 36
TALLAHASSEE INTL (TLH)

ASR

MISSED APPROACH: Climb to 4000 direct SZW VORTAC and on SZW VORTAC R-288 to QUILL/SZW 11.8 DME and hold, continue climb-in-hold to 4000.

MISSED APCH FIX

QUILL
SZW 11.8
108°
117.5 SZW
R-288
Chan 122

SEMINOLE
117.5 SZW
Chan 122

3000 to HAKUT
173° (21)

406 Δ
215 \pm Δ
209 \pm Δ
XBEGN
SZW 11.8
DACAR
SZW 14.5

1600
3530
(6.5)

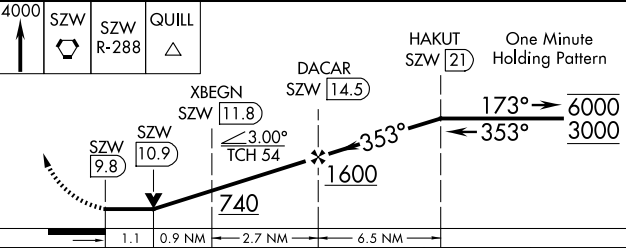
(IF/IAF)
HAKUT
SZW 21

173°
1 min
3530
HOLD
6000
3000

ELEV 83 **TDZE 62**

TDZ/CL Rwy 27
REIL Rwys 9 and 18
HIRL Rwys 9-27 and 18-36

MSA SZW 25 NM
3300

4000 ↑	SZW ⬇	SZW R-288	QUILL △					
CATEGORY	A		B		C	D	E	
S-36	460/24		398 (400-½)		460/35 398 (400-¾)			
CIRCLING	580-1 497 (500-1)	600-1 517 (600-1)	640-1½ 557 (600-1½)	800-2¼ 717 (800-2¼)	1000-3 917 (1000-3)			