


LOC/DME I-OGS	APP CRS	Rwy Ldg	6035
110.7	269°	TDZE	302
Chan 44		Apt Elev	302

LOC RWY 27

OGDENSBURG INTL (OGS)

ADF required.	MALSF	MISSED APPROACH: Climbing left turn to 2000 direct OGIVE LOM and hold.
<div><div><div>▼</div><div>▲ NA</div></div><div>VDP NA when using Massena altimeter setting. When local altimeter setting not received, use Massena altimeter setting and increase all MDA 100 feet and S-LOC 27 and Circling visibility Cat C/D ¼ SM.</div></div>	<div><div><div>☾</div><div>☾</div></div></div>	

AWOS-3	BOSTON CENTER	UNICOM
118.525	135.25 377.1	122.8 (CTAF) 0

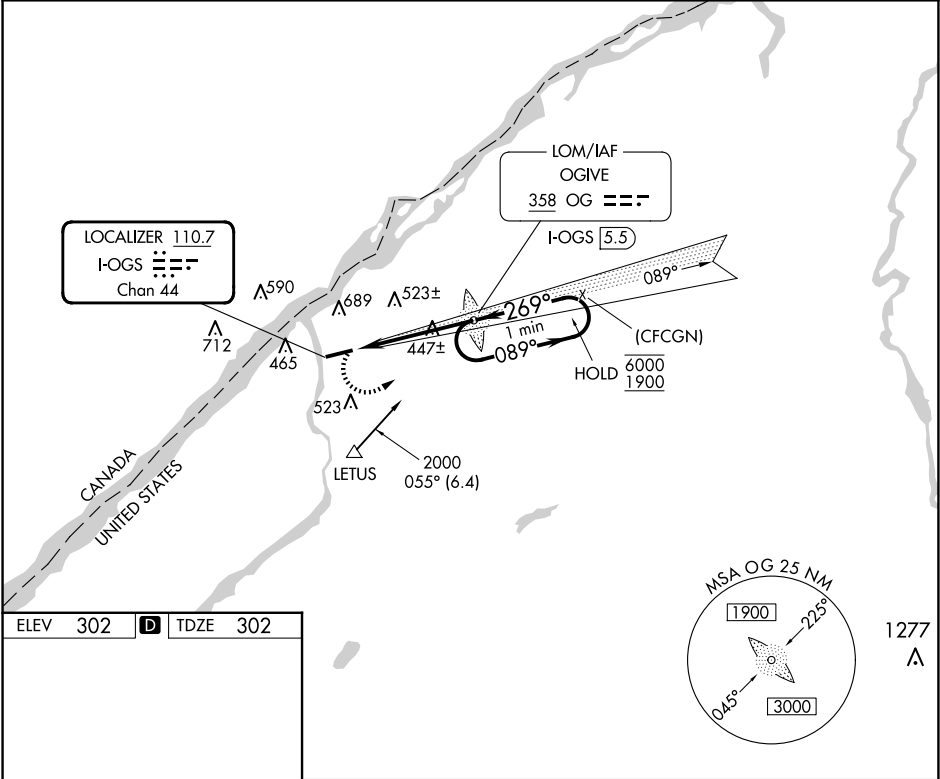

ELEV 302	TDZE 302
<div><div><div>6000 X 1.50</div><div>269°</div></div><div><div>2000</div><div>OG</div></div><div><div>VGSI and descent angles not coincident (VGSI Angle 3.00/TCH 45).</div><div>OG LOM</div><div>I-OGS 5.5</div><div>One Minute Holding Pattern</div></div><div><div>1900</div><div>089°</div><div>6000</div><div>1900</div></div><div><div>269°</div><div>3.38°</div><div>TCH 45</div></div><div><div>1.2</div><div>3.1 NM</div></div></div>	
HIRL Rwy 9-27 0	
FAF to MAP 4.3 NM	
Knots	60 90 120 150 180
Min:Sec	4:18 2:52 2:09 1:43 1:26
CIRCLING	