

VORTAC MMB
115.6
Chan **103**

APP CRS
062°

Rwy Idg
TDZE
Apt Elev
N/A
N/A
2189


VOR/DME-A
WEST WOODWARD (WWR)

⚠

When local altimeter setting not received, use Gage altimeter setting and increase all MDA 40 feet. Circling NA to Rwy's 5 and 23.

MISSED APPROACH: Climb to 4000, then left turn via MMB VORTAC R-062 to NARAH/MMB VORTAC 13 DME and hold.

AWOS-3 118.425	KANSAS CITY CENTER 126.95 379.2	UNICOM 122.8 (CTAF) 0
--------------------------	---	--

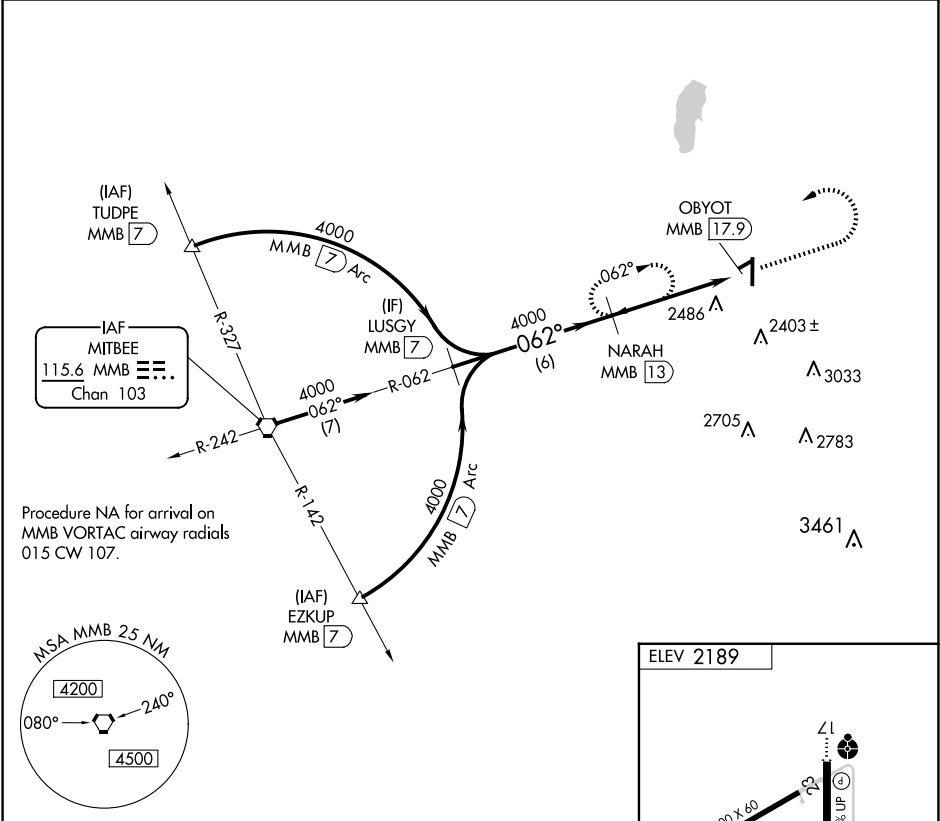

LUSGY
MMB 7

NARAH
MMB 13

OBYOT
MMB 17.9

4000

062°

4000

Procedure Turn NA

6 NM

4.9 NM

4000

MMB R-062

NARAH
MMB 13

2500 X 60

0.5% UP

5505

100

35

2230

CATEGORY	A	B	C	D
CIRCLING	2820-1 631 (700-1)	2840-1 651 (700-1)	2940-2¼ 751 (800-2¼)	2960-2½ 771 (800-2½)

REIL Rwy 35 **0**
MRL Rwy 5-23 and 17-35 **0**