
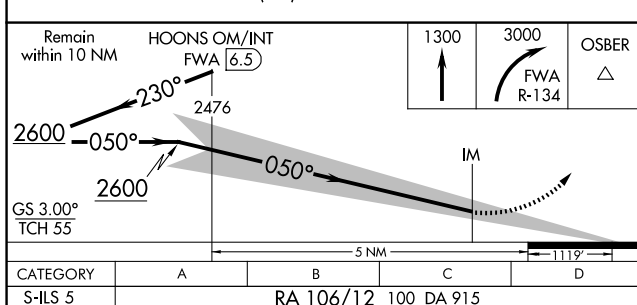


| | | |
|----------------------------------|------------------------|--|
| LOC I-HVD <u>111.9</u> | APP CRS 050° | Rwy Ldg 11981 TDZE 815 Apt Elev 815 |
|----------------------------------|------------------------|--|

ILS RWY 5 (CAT II) FORT WAYNE INTL (FWA)

| | | |
|-----|---|---|
| ASR |  | <p>MISSED APPROACH: Climb to 1300 then climbing right turn to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.</p> |
|-----|---|---|

| | | | | |
|--|---|---|--|--------------------------------------|
| <p>ATIS</p> <p>121.25 360.825</p> | <p>FORT WAYNE APP CON</p> <p>127.2 284.6</p> | <p>FORT WAYNE TOWER</p> <p>119.1 269.325</p> | <p>GND CON</p> <p>121.9 348.6</p> | <p>CLNC DEL</p> <p>124.75</p> |
|--|---|---|--|--------------------------------------|

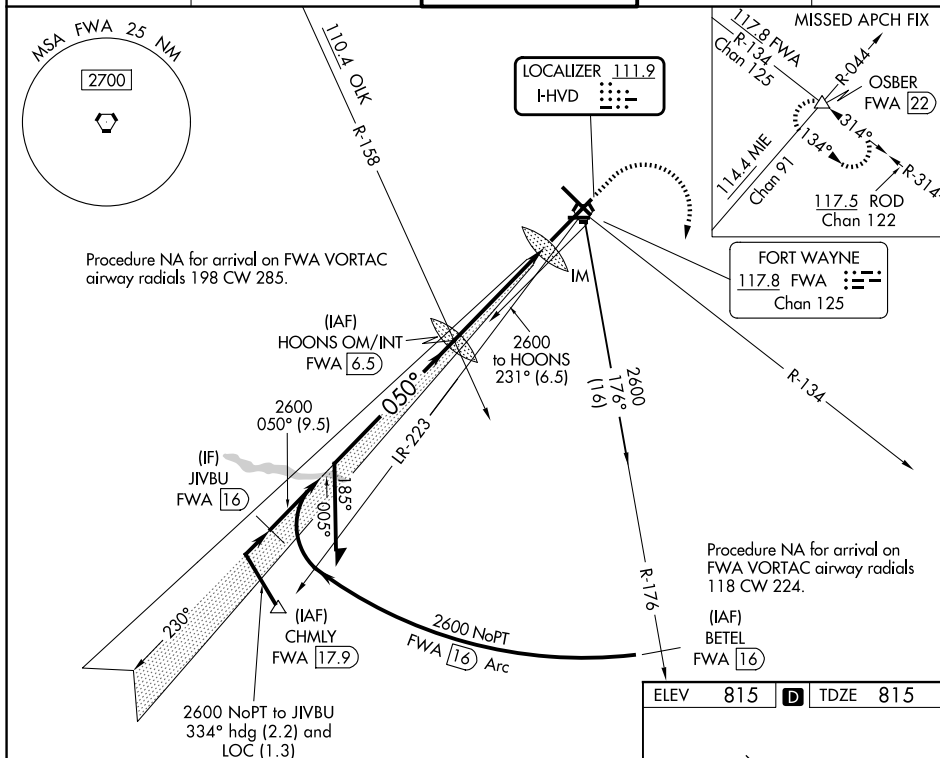

CATEGORY II ILS - SPECIAL AIRCREW
& AIRCRAFT CERTIFICATION REQUIRED

