
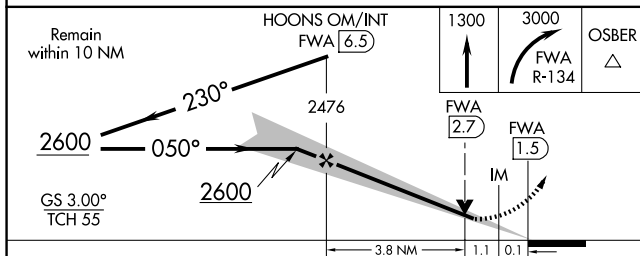


LOC I-HVD <u>111.9</u>	APP CRS 050°	Rwy Ldg 11981 TDZE 815 Apt Elev 815
----------------------------------	------------------------	--


ILS or LOC RWY 5
FORT WAYNE INTL (FWA)

<p>▼ For inop ALS, increase S-ILS 5 Cat E visibility to RVR 4000 and S-LOC 5 Cats C, D, and E visibility to 1½ SM.</p> <p>ASR</p>	<p>ALSF-2</p> <p></p>	<p>MISSED APPROACH: Climb to 1300 then climbing right turn to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.</p>
---	--	---

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75
------------------------	-----------------------------------	-----------------------------------	------------------------	--------------------

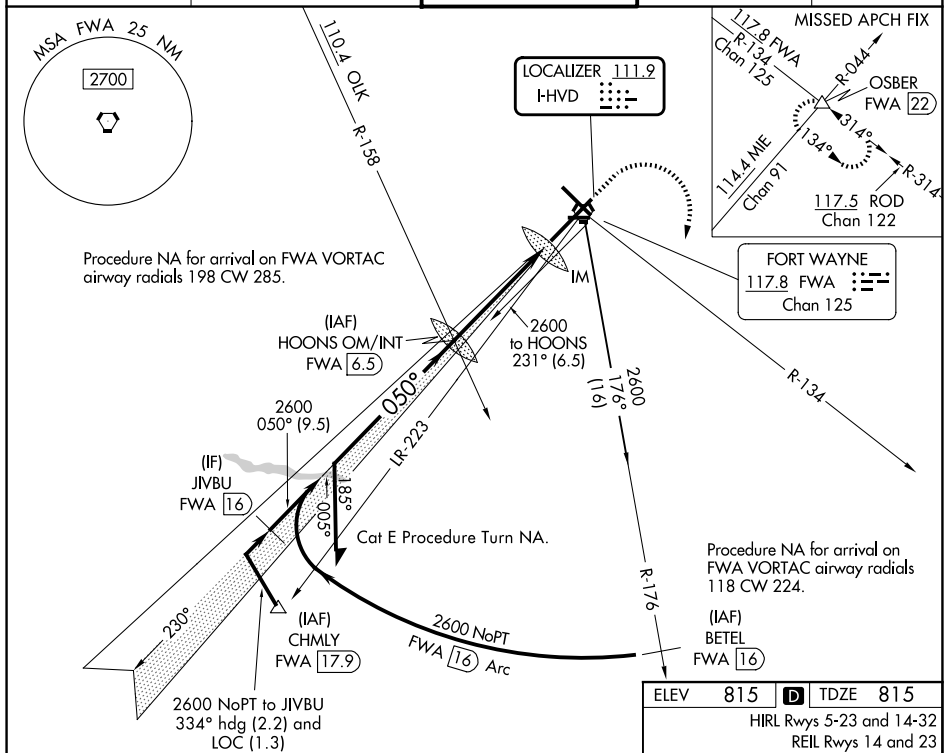

CATEGORY	A	B	C	D	E
S-ILS 5	1015/18 200 (200-½)				
S-LOC 5	1300/24	485 (500-½)	1300/50 485 (500-1)		
CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

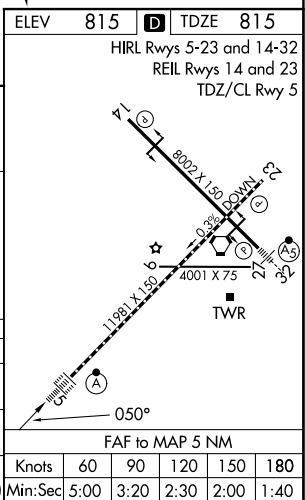

FORT WAYNE INTL (FWA)
ILS or LOC RWY 5