


ILS or LOC RWY 17L  
OKC WILL ROGERS INTL (OKC)

**MISSED APPROACH:** Climb to 5000 on heading 180° and on IRW VORTAC R-168 to JAVXE/IRW 11.6 DME and hold, continue climb-in-hold to 5000.

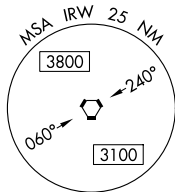

CLNC DEL  
**124.35**




## MISSED APCH FIX

JAVXE  
RW 11.6


W 114.1  
han 88

### One Minute Holding Pattern

Use I-EXR DME when on the localizer course.

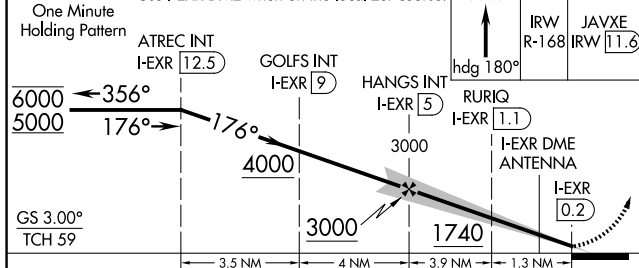

|      |      |          |      |      |
|------|------|----------|------|------|
| ELEV | 1296 | <b>D</b> | TDZE | 1287 |
|------|------|----------|------|------|

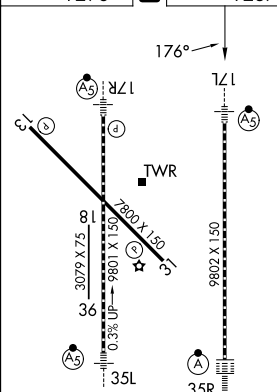

MIRL Rwy 13-31  
TDZ/CL Rwy 35R  
HIRL Rwys 17L-35R and 17R-35L  
REIL Rwys 13 and 31