

LOC I-BAF	APP CRS	Rwy Ldg
111.9	204°	8919
		TDZE
		270
		Apt Elev
		270

ILS or LOC RWY 20

WESTFIELD-BARNES RGNL (BAF)

⚠

⚠

⚠

Circling Rwy 15 NA at night. DME from BAF VORTAC. DME use requires simultaneous reception of I-BAF and BAF DME. For inop ALS, increase S-ILS 20 Cat E visibility to RVR 4000; increase S-LOC 20 Cat E visibility to 3 SM; increase PETGE fix minimums S-LOC 20 Cat E visibility to 1½ SM.


MALSR

⚠

⚠

MISSED APPROACH: Climb to 1300 then climbing right turn to 4000 direct CTR VOR/DME and hold, continue climb-in-hold to 4000.

ATIS	YANKEE APP CON	WESTFIELD TOWER ★	GND CON	CLNC DEL
127.1 263.15	125.35 281.5	125.075 (CTAF) 251.1	121.7 289.4	121.7

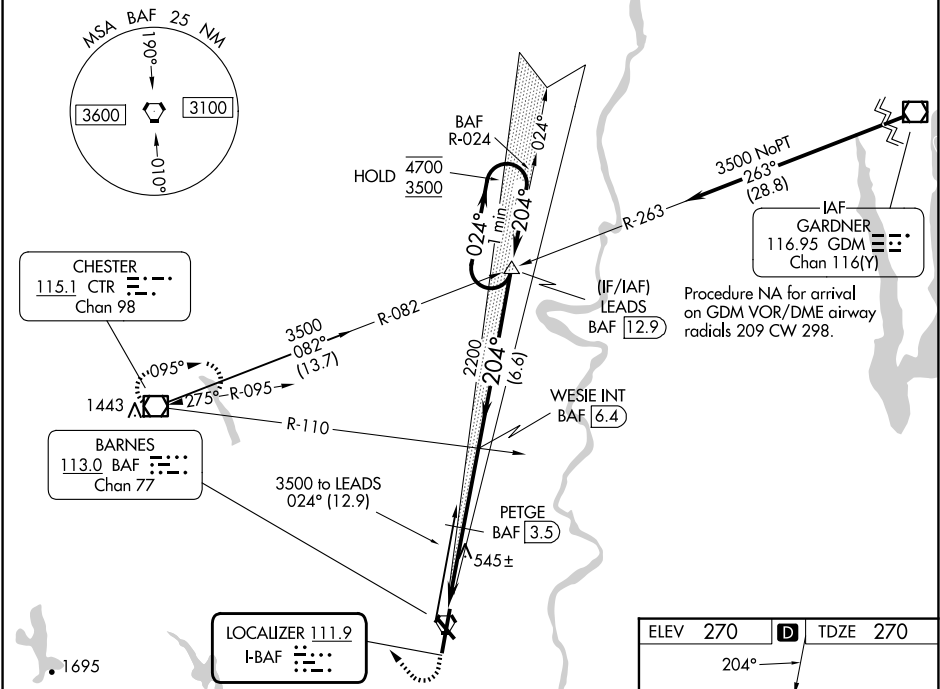

1300	4000	CTR	* LOC only.	WESIE INT BAF 6.4	LEADS BAF 12.9	One Minute Holding Pattern
BAF 0.5	BAF 2	PETGE BAF 3.5		2200	204°	204°
1.5 NM	1.5 NM	2.9 NM	6.6 NM			GS 3.00° TCH 50
CATEGORY	A	B	C	D	E	
S-ILS 20	520/24 250 (300-½)					
S-LOC 20	1260/40 990 (1000-¾)	1260/55 990 (1000-1)	1260-2½ 990 (1000-2½)			
CIRCLING	1260-1¼ 990 (1000-1¼)	1260-1½ 990 (1000-1½)	1260-3 990 (1000-3)	1660-3 1390 (1400-3)		
PETGE FIX MINIMUMS (DME REQUIRED)						
S-LOC 20	800/24 530 (600-½)	800/55 530 (600-1)				
CIRCLING	1160-1¼ 890 (900-1¼)	1160-2¾ 890 (900-2¾)	1660-3 1390 (1400-3)			

