

LOC/DME I-ABR 109.9 Chan 36	APP CRS 308°	Rwy Ldg 6901 TDZE 1301 Apt Elev 1302
---	------------------------	---

ILS or LOC RWY 31
ABERDEEN RGNL (ABR)

ADF required.

T For inop ALS, increase S-LOC 31 Cats C/D
A visibility to 1 SM.

MALS



MISSED APPROACH: Climb to 3000 then right turn direct
RENEY LOM/I-ABR 6.1 DME and hold.

ASOS
125.875



MINNEAPOLIS CENTER
120.6 371.9

UNICOM
122.7 (CTAF) **L**

ALTERNATE MISSED APCH FIX

ABERDEEN
ABR 
113.0
Chan 77


Procedure NA for arrival on ABR VOR/DME
airway radials 094 CW 171.

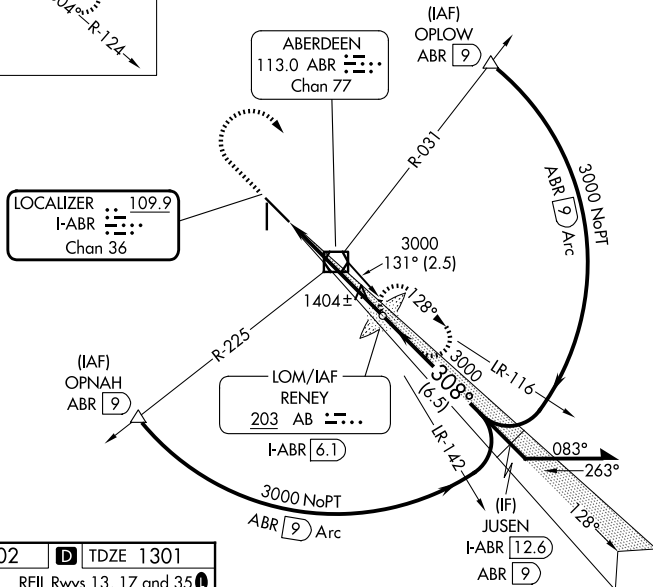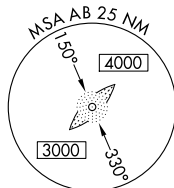

ELEV 1302	D	TDZE 1301
-----------	----------	-----------

REIL Rwy 13, 17 and 35 **L**HIRL Rwy 13-31 **L**

MIRL Rwy 17-35 L

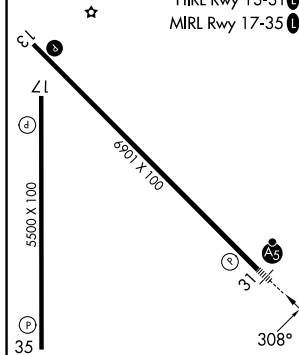

FAF to MAP 4.8 NM


Knots	60	90	120	150	180
Min:Sec	4:48	3:12	2:24	1:55	1:36

ABERDEEN, SOUTH DAKOTA

Amdt 13B 07NOV19

3000		AB
------	---	----

* LOC only.

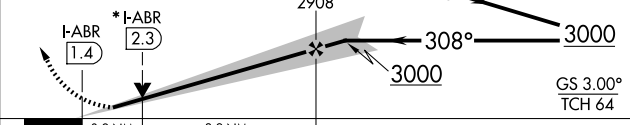

CATEGORY	A	B	C	D
S-ILS 31	1501- $\frac{1}{2}$ 200 (200- $\frac{1}{2}$)			
S-LOC 31	1660- $\frac{1}{2}$ 359 (400- $\frac{1}{2}$)	1660- $\frac{5}{8}$ 359 (400- $\frac{3}{4}$)	1660- $\frac{3}{4}$ 359 (400- $\frac{3}{4}$)	

ABERDEEN RGNL (ABR)

ILS or LOC RWY 31