



LOC I-SOU <b>110.1</b>	APP CRS <b>013°</b>	Rwy Ldg TDZE Apt Elev	<b>9072</b> <b>1180</b> <b>1205</b>
---------------------------	------------------------	-----------------------------	---

ILS or LOC RWY 1


MARQUETTE/SAWYER RGNL (SAW)

DME required for LOC only.	MALSR	MISSED APPROACH: Climb to 1700 then climbing right turn to 3000 on heading 138° and on SAW VOR/DME R-095 to YEXJO INT and hold, continue climb-in-hold to 3000.
NA Autopilot coupled approach NA below 1360 MSL.	AS	

AWOS-3PT <b>118.375</b>	MINNEAPOLIS CENTER <b>119.1 290.2</b>	SAWYER TOWER ★ <b>119.975 (CTAF) 0</b>	GND CON <b>121.65</b>	UNICOM <b>122.7</b>
----------------------------	--	---	--------------------------	------------------------

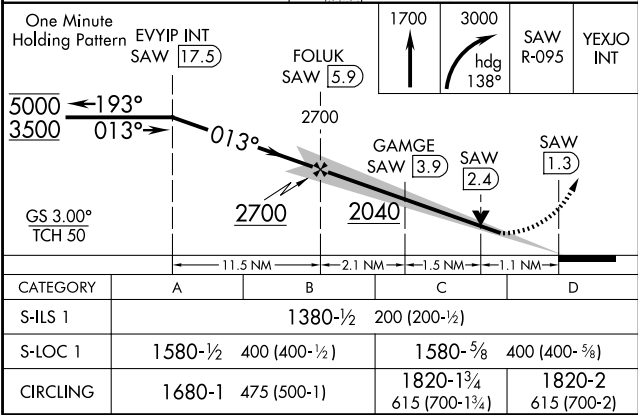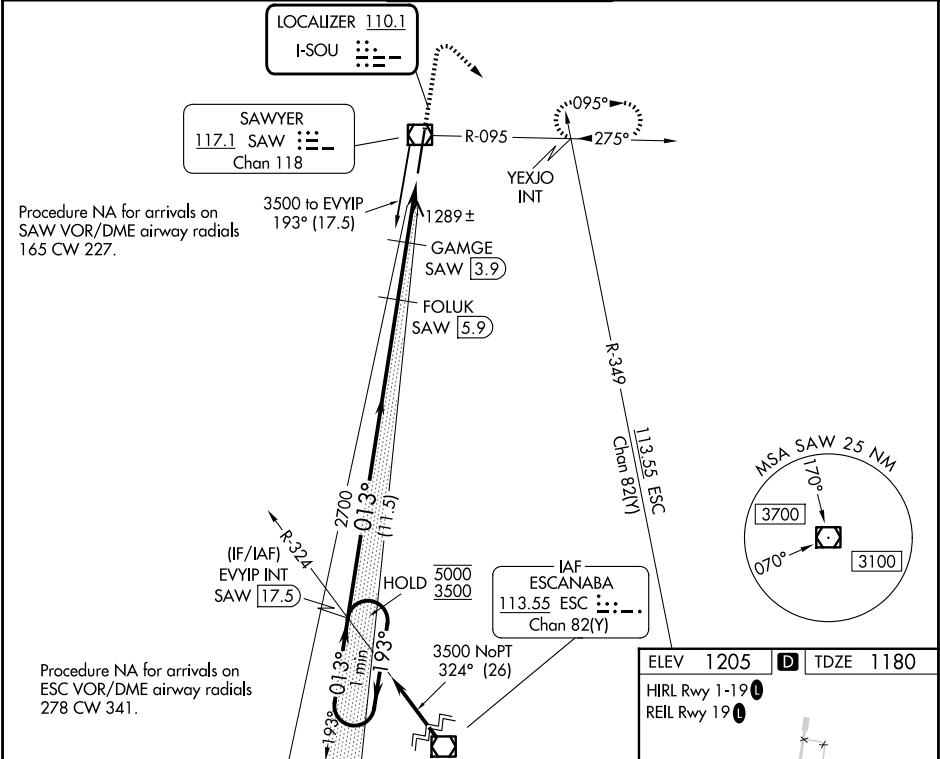

ELEV 1205	TDZE 1180
HIRL Rwy 1-19	REIL Rwy 19

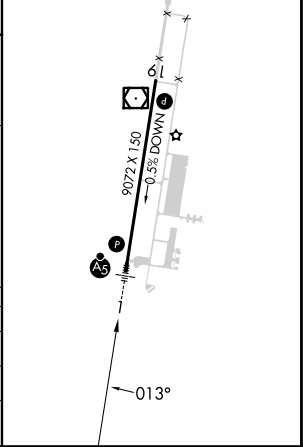

ILS or LOC RWY 1