


VORTAC SNS <b>117.3</b> Chan <b>120</b>	APP CRS <b>314°</b>	Rwy Ldg TDZE Apt Elev <b>163</b>	N/A N/A <b>163</b>
---	------------------------	--	--------------------------

VOR-A

WATSONVILLE MUNI (WVI)

<div><div></div><div></div></div> <div>Circling NA west of Rwy 2-20. When local altimeter setting not received, use Monterey altimeter setting and increase all MDAs 80 feet. DME required. Circling Rwy 27 NA at night.</div>	<div>MISSED APPROACH: Climbing left turn to 5000 direct SNS VORTAC and hold, continue climb-in-hold to 5000.</div>
--	--

ASOS <b>132.275</b>	NORCAL APP CON <b>127.15 307.125</b>	UNICOM <b>122.8</b> (CTAF) <b>0</b>
------------------------	---	--

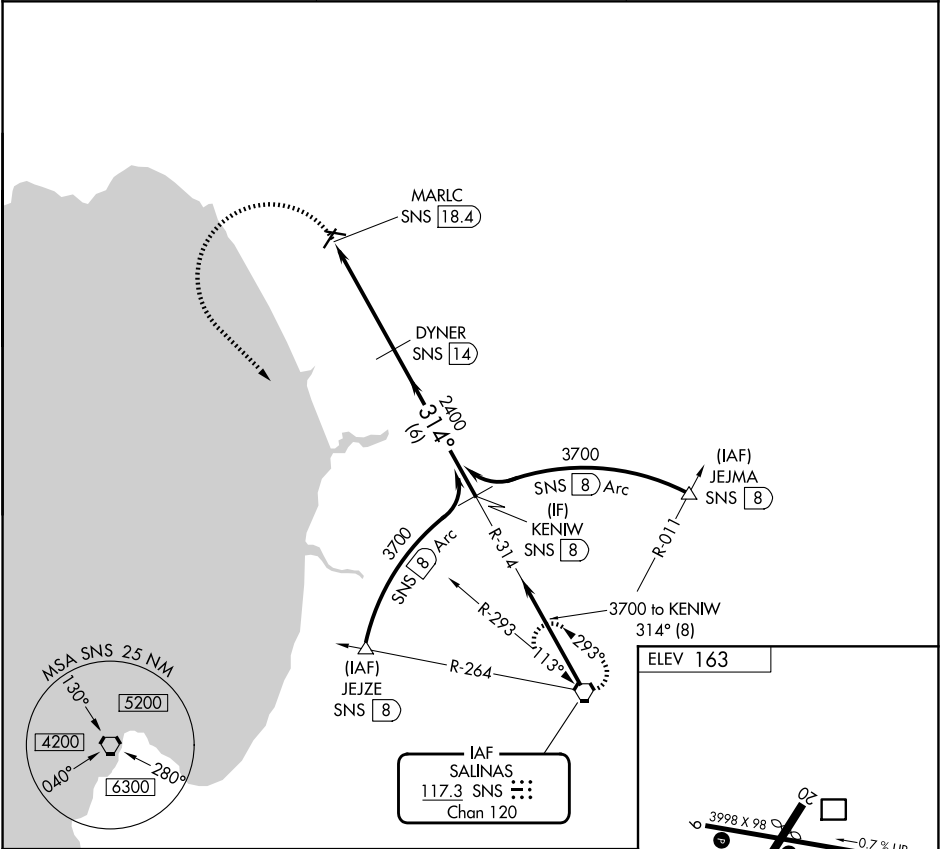

<div>5000</div> <div><div></div><div>SNS</div><div></div></div>	<div>DYNER</div> <div>SNS</div> <div>14</div>	<div>KENIW</div> <div>SNS</div> <div>8</div>		
<div>MARLC</div> <div>SNS</div> <div>18.4</div>	<div>2400</div>	<div>3700</div>		
<div>4.4 NM</div>	<div>6 NM</div>	<div>Procedure Turn NA</div>		
CATEGORY	A	B	C	D
CIRCLING	1300-1¼ 1137 (1200-1¼)	1300-1½ 1137 (1200-1½)	1300-3	1137 (1200-3)

