

ILS Z or LOC Z RWY 13R

LOC/DME I-NQI 110.9 Chan 46	APCH CRS 130°	Rwy Idg TDZE Arpt Elev 8000 50 50
---	-------------------------	---


[USN]

KINGSVILLE NAS (KNQI)


TACAN required

MISSED APPROACH: Climb to 500 then climbing right turn to 3000 and intercept NQI TACAN R-184 to BRAMA and hold.

ATIS★ 282.25	APP CON 119.9 290.45	TOWER★ 124.1 377.05	GND CON 239.05	CLNC DEL 328.4	ASR/ PAR
------------------------	--------------------------------	-------------------------------	--------------------------	--------------------------	-------------

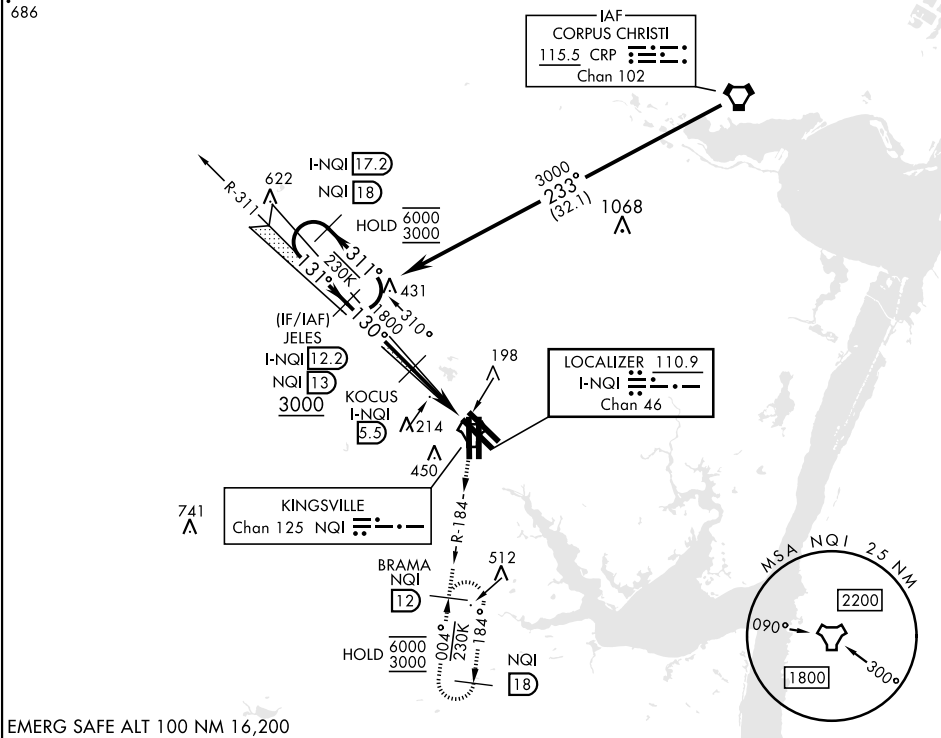

EMERG SAFE ALT 100 NM 16,200

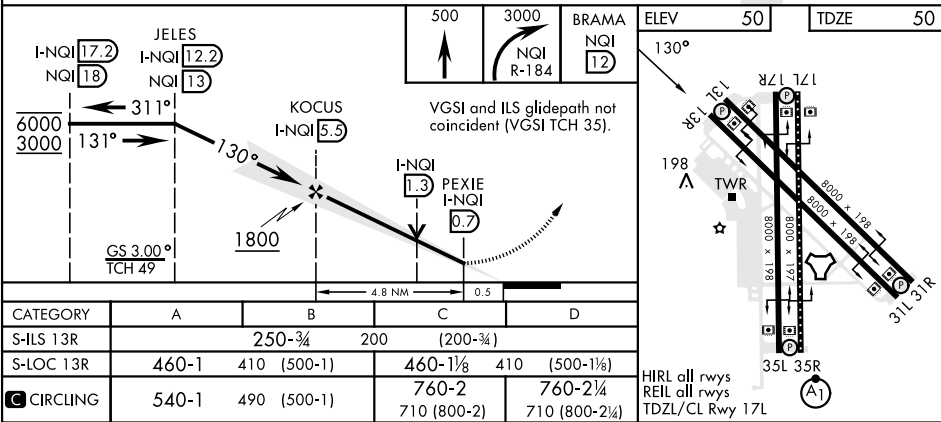

ILS Z or LOC Z RWY 13R