


LOC/DME	I-RUT	APP CRS	Rwy Ldg TDZE	5004
111.7		194°	787	
Chan 54			Apt Elev	787

ILS Y or LOC Y RWY 19

RUTLAND/SOUTHERN VERMONT RGNL (RUT)

DME required.	MALSRR	MISSED APPROACH: Climb to 2840 then climbing right turn to 5700 on heading 360° and CAM VOR/DME R-033 to KOPVE/I-RUT 16.3 DME and hold.
<div><div>⚠</div><div>⚠</div><div>⚠</div></div> <div><div>Circling to Rwy 13, 31 NA at night.</div><div>Circling NA northeast of Rws 19 and 31.</div><div>Inop table does not apply to S-ILS 19 all Cats, S-LOC 19 Cats C/D.</div></div>	<div><div>⚠</div><div>⚠</div><div>⚠</div></div> <div><div>-7°C</div></div>	

AWOS-3PT	BOSTON CENTER	UNICOM
118.375	135.7 282.2	122.8 (CTAF) 0

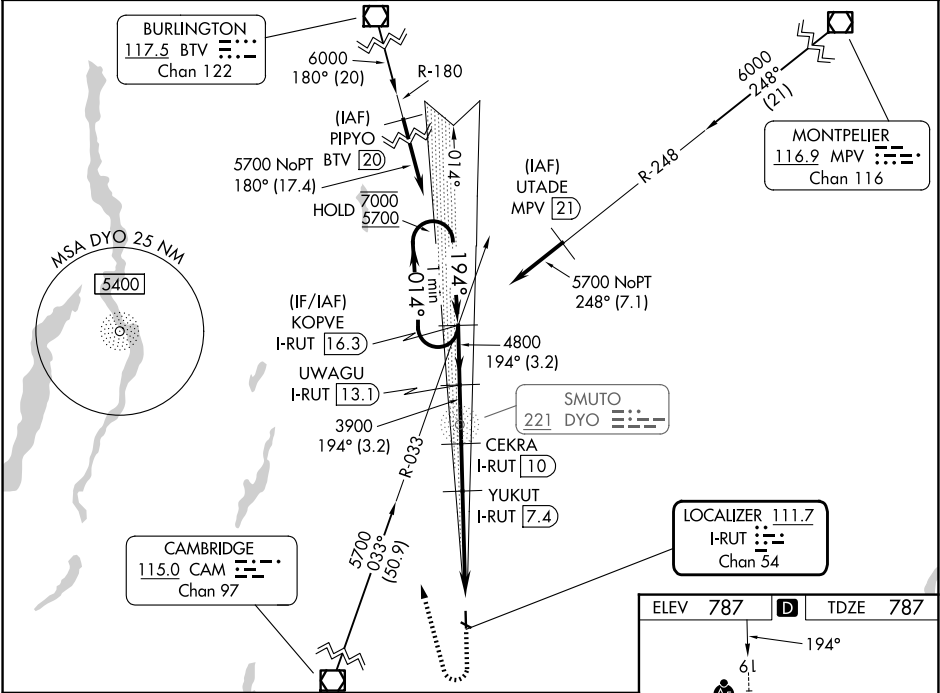

One Minute Holding Pattern	KOPVE I-RUT 16.3	2840	5700	CAM R-033	KOPVE I-RUT 16.3
	7000 ← 014°				
	5700 → 194°				
	GS 3.20° TCH 54				
	3.2 NM	3.2 NM	2.5 NM	3.5 NM	3 NM
CATEGORY	A	B	C	D	
S-ILS 19	2162-5 1375 (1400-5)				
S-LOC 19	2160-¾ 1373 (1400-¾)	2160-1 1373 (1400-1)	2160-3 1373 (1400-3)		
CIRCLING	2160-1¼ 1373 (1400-1¼)	2160-1½ 1373 (1400-1½)	2520-3 1733 (1800-3)	2760-3 1973 (2000-3)	

