


## HI-ILS or LOC RWY 15

LOC I-CDB <b>110.3</b>	APCH CRS <b>146°</b>	Rwy Idg <b>10,179</b> TDZE <b>75</b> Arpt Elev <b>100</b>	AL-1241 [USAF]	COLD BAY (CDB) (PACD)	
<p>▼ * When ALS inop, increase CAT E RVR to 4000.          ** When ALS inop, increase RVR to 5500.          *** Circling not authorized SW of Rwy 15-33.</p>			<p>MALSR</p>	<p>MISSED APPROACH: Climb to 1100, then climbing left turn to 3000 direct CDB VORTAC, then on CDB R-329 to DEADEND/CDB 10 DME and hold.</p>	
ANCHORAGE CENTER <b>118.5 278.3</b>		COLD BAY RADIO <b>123.6</b> (CTAF) <b>0</b>		ASOS <b>135.75</b>	

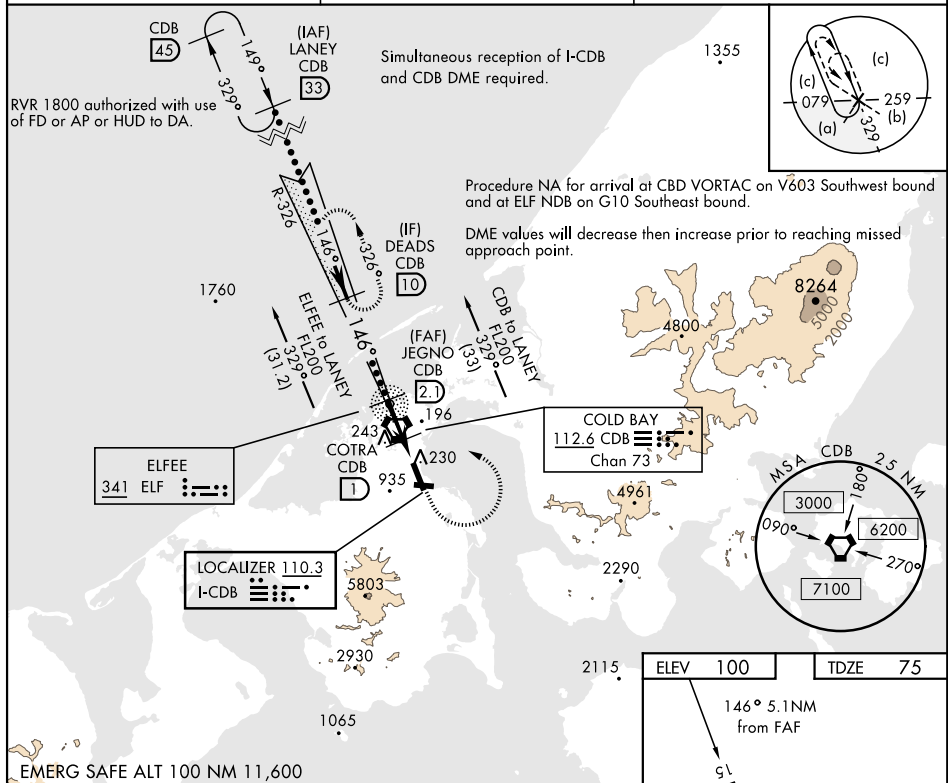

CATEGORY	C	D	E
S-ILS 15 *	275/24	200	(300-½)
S-LOC 15 **	440/35	365	(400-¾)
CIRCLING ***	560-1½ 460 (500-1½)	860-2½ 760 (800-2½)	940-3 840 (900-3)

HIRL all Rwy 4

FAF to MAP 4.5 NM					
Knots	120	140	160	180	200
Min:Sec	2:15	1:56	1:41	1:30	1:21

## HI-ILS or LOC RWY 15