

VOR or TACAN RWY 36  
TALLAHASSEE INTL (TLH)

ASR



**MISSED APPROACH:** Climb to 4000 direct SZW VORTAC and on SZW VORTAC R-288 to QUILL/SZW 11.8 DME and hold, continue climb-in-hold to 4000.

**MISSED APCH FIX**

QUILL  
SZW [11.8]  
108°  
117.5 SZW  
R-288  
Chan 122

**SEMINOLE**  
117.5 SZW [11.8]  
Chan 122

3000 to HAKUT  
173° (21)

Λ<sup>1048</sup>  
Λ<sup>686</sup>  
Λ<sup>845</sup>  
Λ<sup>549</sup>  
Λ<sup>476</sup>  
Λ<sup>267</sup>  
Λ<sup>130</sup>  
406Λ

215± Λ  
209± Λ  
XBEGN  
SZW [11.8]  
DACAR  
SZW [14.5]

1600  
353° (6.5)

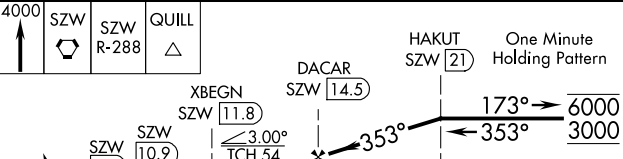
(IF/IAF)  
HAKUT  
SZW [21]

173°  
1 min  
353°  
HOLD  
6000  
3000

**ELEV 83** **TDZE 62**

TDZ/CL Rwy 27  
REIL Rwys 9 and 18  
HIRL Rwys 9-27 and 18-36

MSA SZW 25 NM  
3300

4000 ↑	SZW ◻	SZW R-288	QUILL △					
CATEGORY	A		B		C	D	E	
S-36	460/24		398 (400-½)		460/35 398 (400-¾)			
CIRCLING	580-1 497 (500-1)	600-1 517 (600-1)	640-1½ 557 (600-1½)	800-2¼ 717 (800-2¼)	1000-3 917 (1000-3)			