

LOC	I-LMJ	APP CRS	Rwy Idg	11001
110.7		218°	TDZE	964
			Apt Elev	964

ILS or LOC RWY 22

GREENVILLE SPARTANBURG INTL (GSP)



⚠



When local altimeter setting not received, use Greenville Downtown altimeter setting: increase DA to 1193; increase all MDAs 40 feet and visibility S-LOC 22 Cats C and D to RVR 3500 and Circling Cat D ¼ SM. For inop ALS, increase S-LOC 22 Cat C/D visibility to RVR 5500.

MALSR

MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 direct SPA VORTAC and hold.

ATIS	GREER APP CON★	GREER TOWER★	GND CON	CLNC DEL	UNICOM
134.25	118.8 270.275	120.1(CTAF) 251.15	121.9	121.9	122.95

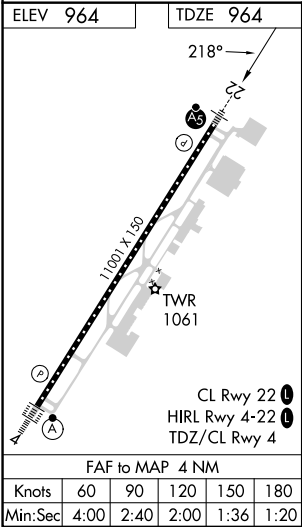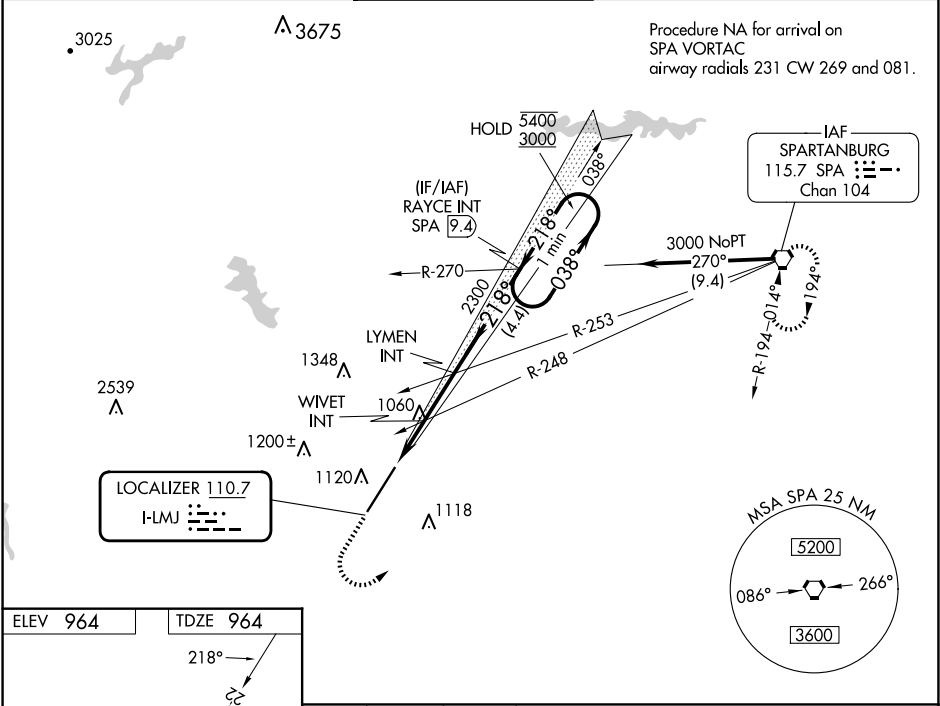

2000 ↑		3000 ↙	SPA 	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 76).		One Minute Holding Pattern	
*LOC only.				WIVET INT	LYMEN INT 2300	RAYCE INT SPA 9.4	
						038° → 5400 ← 218° 3000 GS 3.00° TCH 61	
CATEGORY	A		B		C		D
S-ILS 22	1164/24 200 (200-½)						
S-LOC 22	1320/24 356 (400-½)			1320/30 356 (400-¾)			
CIRCLING	1440-1 476 (500-1)			1480-1½ 516 (600-1½)		1700-2¼ 736 (800-2¼)	