


LOC/DME I-OGS	APP CRS	Rwy Ldg	6035
110.7	269°	TDZE	302
Chan 44		Apt Elev	302

LOC RWY 27


OGDENSBURG INTL (OGS)

ADF required.	MALSF	MISSED APPROACH: Climbing left turn to 2000 direct OGIVE LOM and hold.
<div><div><div>▼</div><div>▲ NA</div></div><div>VDP NA when using Massena altimeter setting. When local altimeter setting not received, use Massena altimeter setting and increase all MDA 100 feet and S-LOC 27 and Circling visibility Cat C/D ¼ SM.</div></div>	<div><div><div>☉</div><div>☉</div></div></div>	

AWOS-3	BOSTON CENTER	UNICOM
118.525	135.25 377.1	122.8 (CTAF) 0

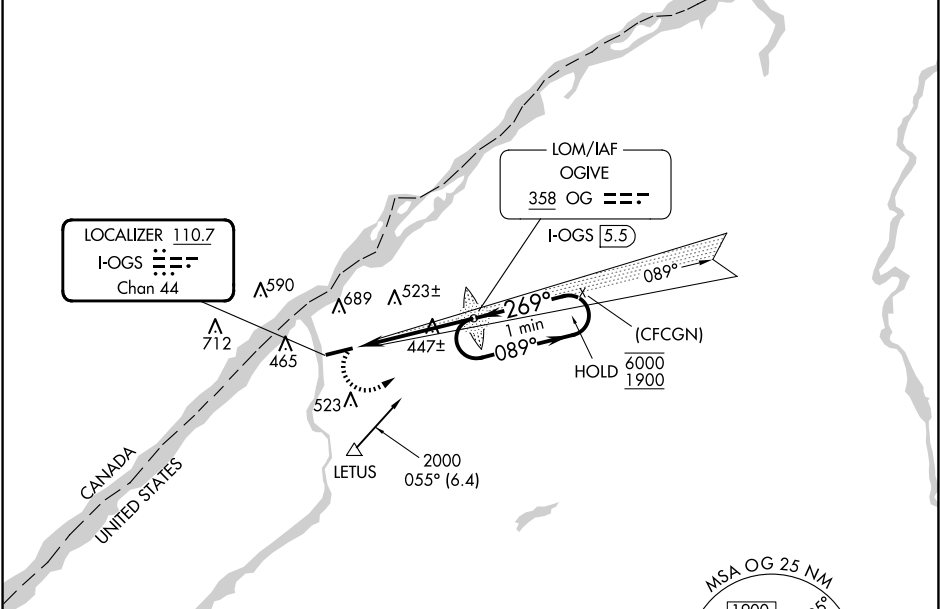

ELEV 302	TDZE 302
----------	----------

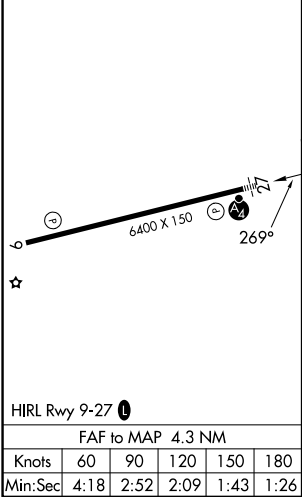

2000	OG	VGSI and descent angles not coincident (VGSI Angle 3.00/TCH 45).	OG LOM	One Minute Holding Pattern
			I-OGS 5.5	
			I-OGS 2.4	
			I-OGS 1.2	
			269°	
			089°	
			1900	
			6000	
			1900	
			3.38°	
			TCH 45	
			1.2	
			3.1 NM	
CATEGORY	A	B	C	D
S-27	740-1	438 (500-1)	740-1¼	438 (500-1¼)
CIRCLING	760-1	1000-1	1000-2	1000-2¼
	458 (500-1)	698 (700-1)	698 (700-2)	698 (700-2¼)