


LOC/DME I-BRW	APP CRS	Rwy Idg	5900
110.5	260°	TDZE	46
Chan 42		Apt Elev	49

LOC BC RWY 26


WILEY POST-WILL ROGERS MEML (BRW)(PABR)

DME required.	MISSED APPROACH: Climb to 1600 then climbing left turn to 2000 direct BRW VOR/DME and hold, continue climb-in-hold to 2000.
<div><div></div><div></div></div> <div>Circling NA for Cat A north of Rwy 8-26.</div>	

AFIS	ANCHORAGE CENTER	BARROW RADIO
132.15	135.3 239.25	123.6 (CTAF) 0

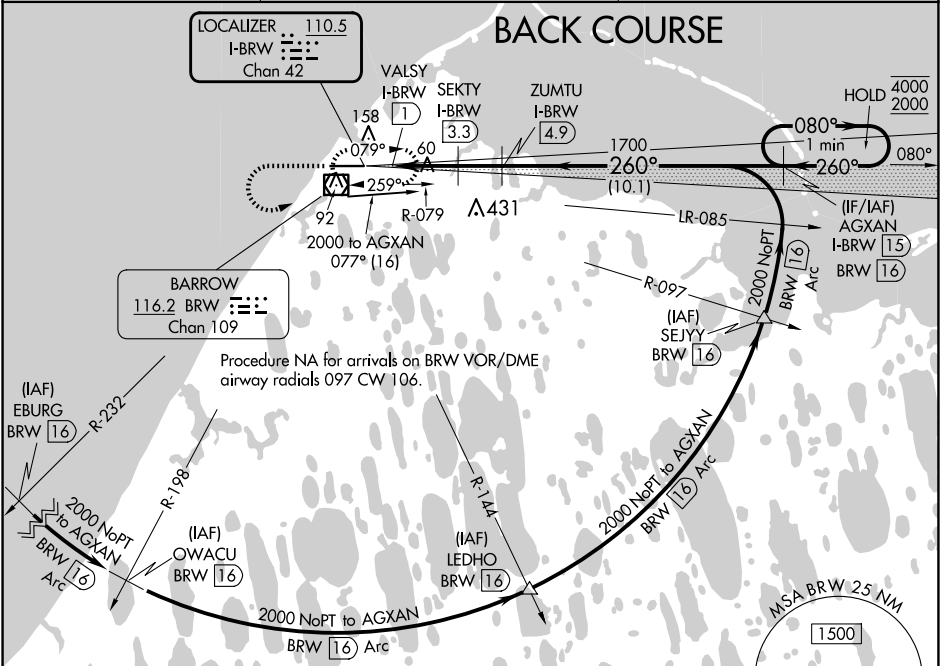

ELEV 49	D	TDZE 46
---------	---	---------

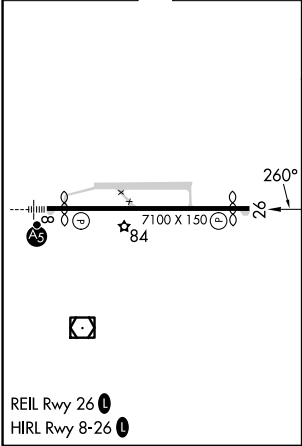

1600	2000	BRW	Use I-BRW DME when on the localizer course. Disregard glide slope indications.	AGXAN I-BRW 15	One Minute Holding Pattern
<div></div>	<div></div>	<div></div>	<div></div>	<div></div>	<div></div>
SEKTY I-BRW 3.3	ZUMTU I-BRW 4.9				
VALSY I-BRW 1					
1200	1700				
1.1 NM	2.3 NM	1.6 NM	10.1 NM		
CATEGORY	A	B	C	D	
S-26	360-1 3/8	314 (400-1 3/8)			
CIRCLING	460-1 3/8 411 (500-1 3/8)	500-1 3/8 451 (500-1 3/8)	500-1 1/2 451 (500-1 1/2)	680-2 631 (700-2)	