

VOR/DME GEE
108.2
Chan **19**

APP CRS
085°

Rwy Idg
TDZE
Apt Elev
N/A
N/A
814


VOR-A
CANANDAIGUA (IUA)

DME or RADAR required.

When local altimeter setting not received, use Rochester altimeter setting and increase all MDAs 100 feet and Circling visibility all Cals ¼ SM, increase WIVRI Fix Circling minimums visibility Cat C ½ SM.

MISSED APPROACH: Climb to 2000 then climbing right turn to 3500 direct GEE VOR/DME and hold.

AWOS-3P 118.675	ROCHESTER APP CON 119.55 269.6	UNICOM 122.8 (CTAF) 0
---------------------------	--	---------------------------------

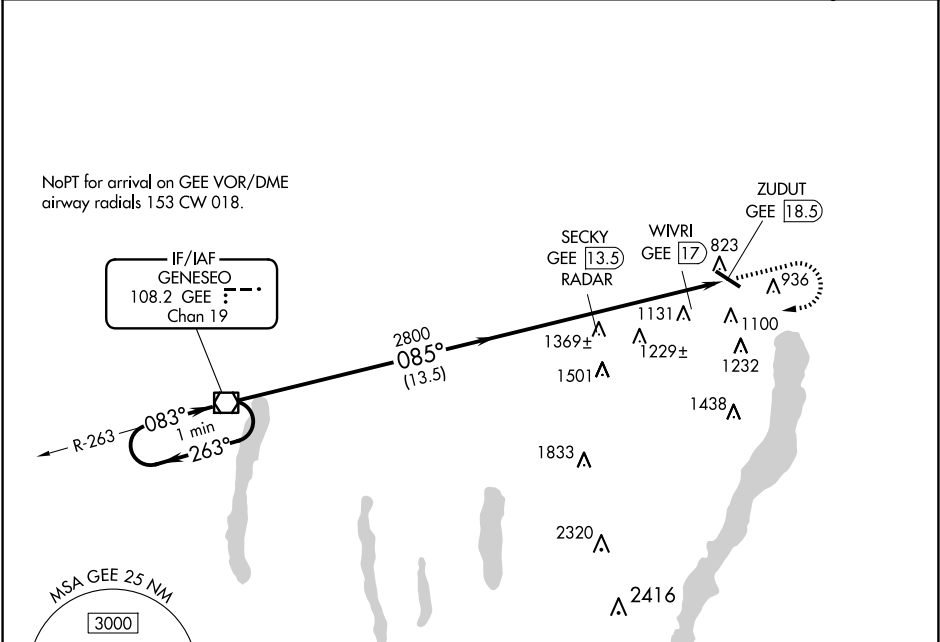

2307 Δ

CATEGORY	A	B	C	D
C CIRCLING	1580-1	766 (800-1)	1580-2 $\frac{1}{4}$ 766 (800-2 $\frac{1}{4}$)	NA

WIVRI FIX MINIMUMS				
C CIRCLING	1500-1	686 (700-1)	1540-2 726 (800-2)	NA

MIRL Rwy 13-31 **1**
REIL Rws 13 and 31 **1**

FAF to MAP 5 NM						
Knots	60	90	120	150	180	
Min:Sec	5:00	3:20	2:30	2:00	1:40	