SAN MARCUS-ONE DEPARTURE (RZS 1 • RZS)

OXNARD, CALIFORNIA

Rwy	Knots	60	120	180	240	300	360
* 03ⓐ	V/V(fpm)	205	410	615	820	1025	1230
† 21ⓑ	V/V(fpm)	216	432	648	864	1080	1296
† 27ⓑ	V/V(fpm)	214	428	642	856	1070	1284

* Minimum † ATC Climb Rate
ⓐ Shafter Transition to 700
ⓑ to 8900

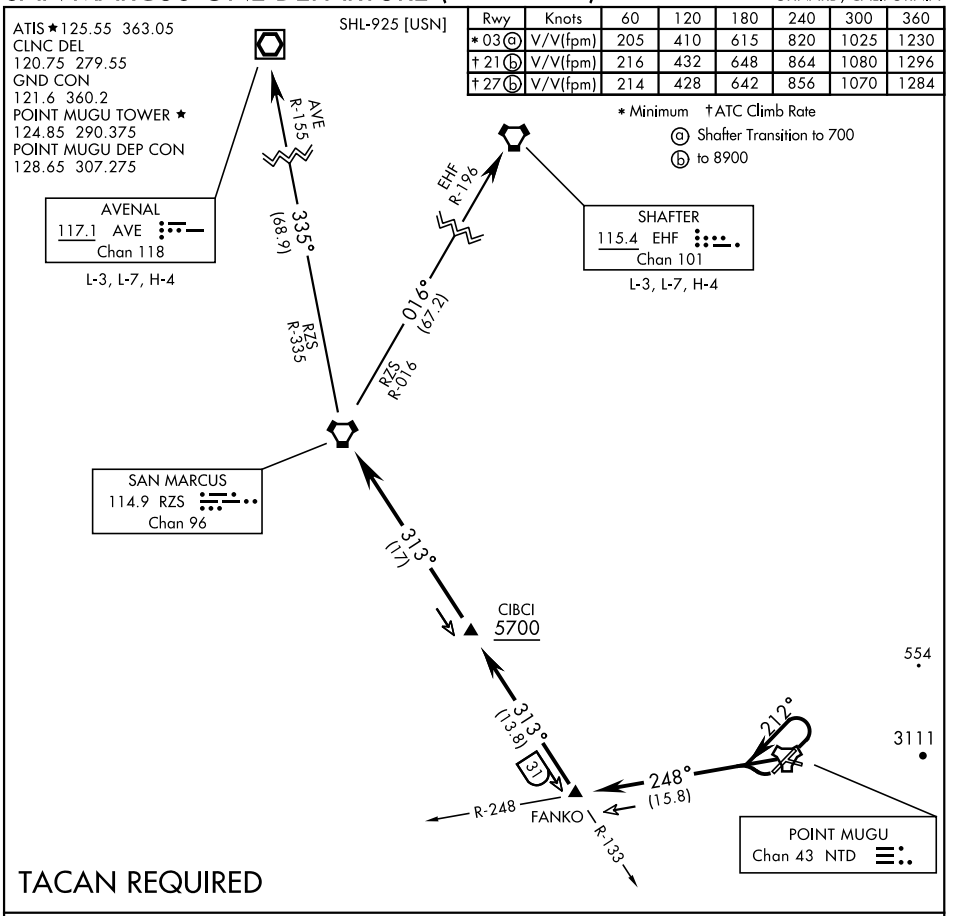

TACAN REQUIRED

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF RWY 3: Climbing left turn to 212° within 3 DME of NTD TACAN, thence...

TAKE-OFF RWY 21: Turn right, thence...

TAKE-OFF RWY 27: Turn left, thence...

Intercept NTD R-248 and via NTD R-248 to FANKO (NTD R-248/16 DME), then via RZS VORTAC R-133 to RZS VORTAC, then via assigned routing.
Cross CIBCI (RZS R-133/17 DME) at or above 5700.

AVENAL TRANSITION (RZS 1•AVE): From over SAN MARCUS VORTAC via RZS R-335 to AVENAL VOR/DME. Cross SAN MARCUS VORTAC at or above 7900.

SHAFTER TRANSITION (RZS 1•EHF): From over SAN MARCUS VORTAC via RZS R-016 to SHAFTER VORTAC. Cross SAN MARCUS VORTAC at or above 8900.

SW-3, 24 FEB 2022 to 24 MAR 2022