VOR or TACAN RWY 5

FORT WAYNE INTL (FWA)

VORTAC FWA	APP CRS	Rwy Idg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

DME or RADAR required.

ASR

For inop ALS, increase S-5 Cat C/D/E visibility to 1⅜ SM.

ALSF-2

MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

Procedure NA for arrival on FWA VORTAC airway radials 198 CW 294.

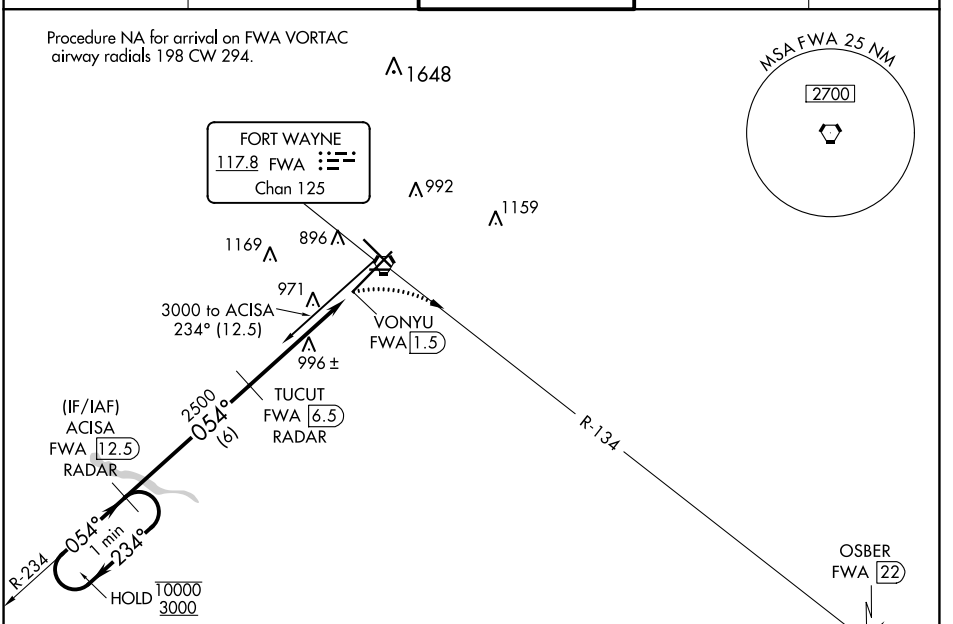

ELEV 815	D	TDZE 815

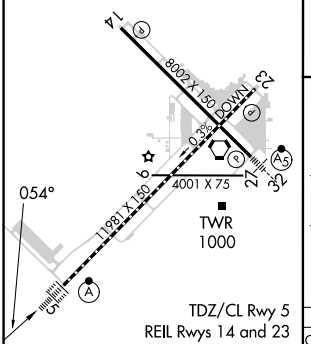

FAF to MAP 5 NM					
Knots	60	90	120	150	180
Min:Sec	5:00	3:20	2:30	2:00	1:40

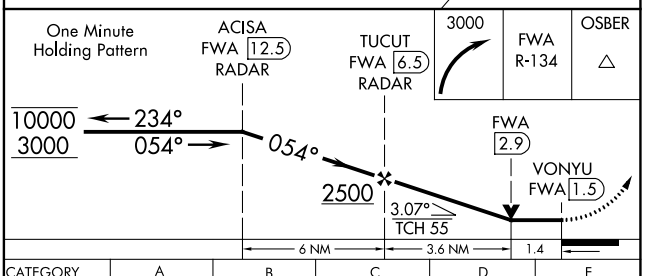

CATEGORY	A	B	C	D	E
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1¼)
C CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 23 MAR 2023 to 20 APR 2023
EC-2, 23 MAR 2023 to 20 APR 2023