ROYAL TWO DEPARTURE (ROYAL2.MCI) 05SEP24

KANSAS CITY DEP CON
118.9 251.075

RADAR and DME required.

TOP ALTITUDE: 10000

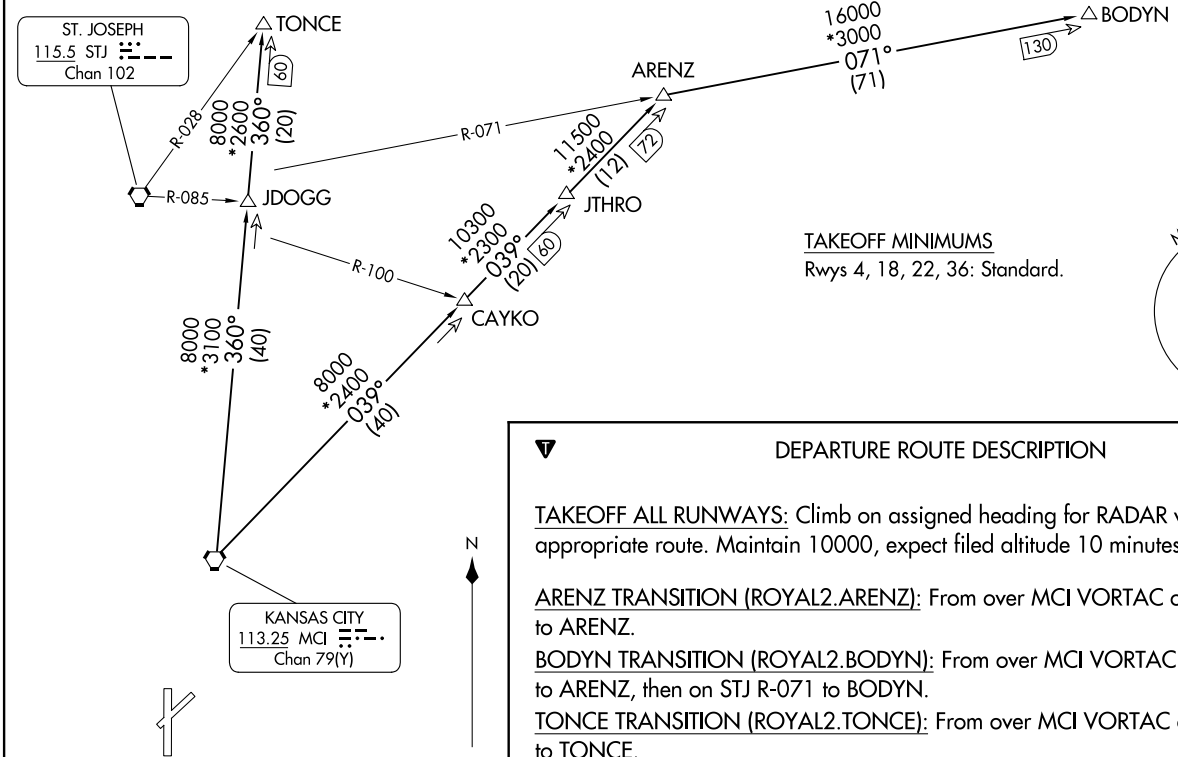

TAKEOFF MINIMUMS
Rwys 4, 18, 22, 36: Standard.

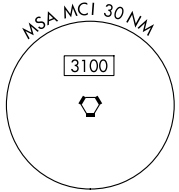

DEPARTURE ROUTE DESCRIPTION

TAKEOFF ALL RUNWAYS: Climb on assigned heading for RADAR vectors to appropriate route. Maintain 10000, expect filed altitude 10 minutes after departure.

ARENZ TRANSITION (ROYAL2.ARENZ): From over MCI VORTAC on MCI R-039 to ARENZ.

BODYN TRANSITION (ROYAL2.BODYN): From over MCI VORTAC on MCI R-039 to ARENZ, then on STJ R-071 to BODYN.

TONCE TRANSITION (ROYAL2.TONCE): From over MCI VORTAC on MCI R-360 to TONCE.

ROYAL TWO DEPARTURE (ROYAL2.MCI) 24249

AL-302 (FAA)

NEW CENTURY AIRCENTER (IXD)
OLATHE, KANSAS