
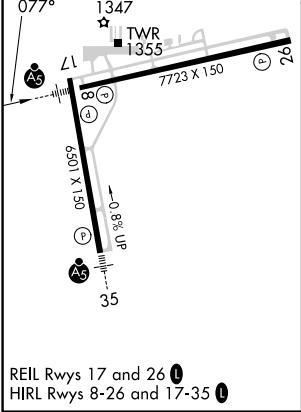


LOC/DME I-CWA <b>110.3</b> Chan <b>40</b>	APP CRS <b>077°</b>	Rwy Idg TDZE Apt Elev	<b>7723</b> <b>1274</b> <b>1277</b>
---	------------------------	-----------------------------	---

ILS or LOC RWY 8  
CENTRAL WISCONSIN (CWA)

DME required. RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 3000 direct ASARE and hold.
	For inop ALS, increase S-LOC 8 Cat C and D visibility to 1 SM.		

ATIS <b>127.45</b>	MINNEAPOLIS CENTER <b>124.4 317.7</b>	CWA TOWER ★ <b>119.75 (CTAF) 0 360.7</b>	GND CON <b>121.9 360.7</b>	UNICOM <b>122.95</b>
-----------------------	--	---	-------------------------------	-------------------------

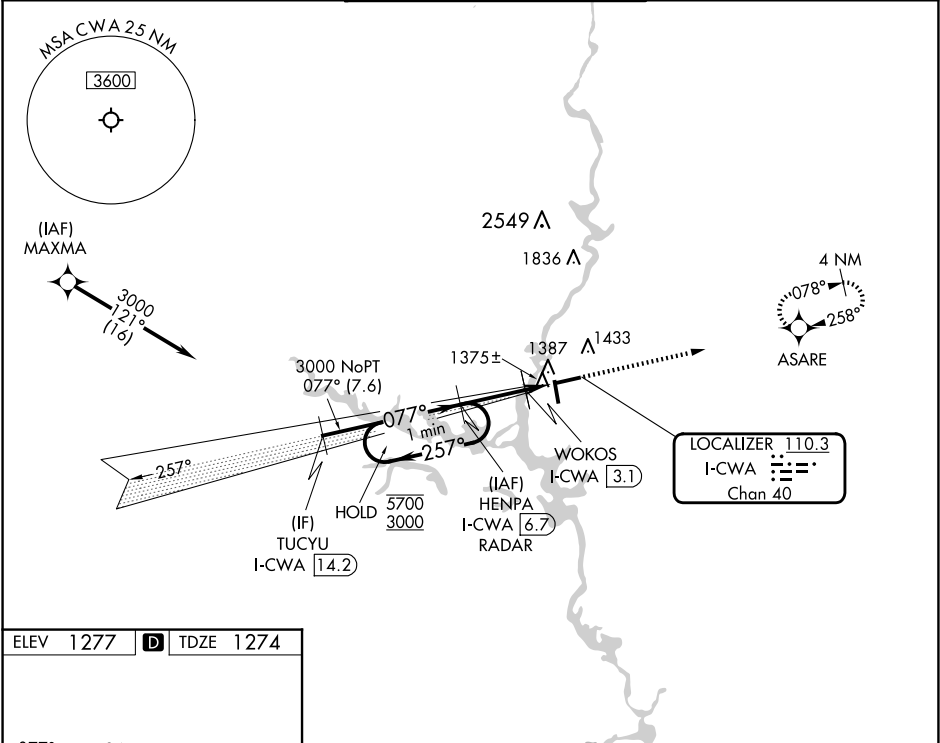

One Minute Holding Pattern		HENPA I-CWA 6.7 RADAR	3000	ASARE
5700 3000		257° 077°	WOKOS I-CWA 3.1	I-CWA 2.4 I-CWA 1.4
GS 3.00° TCH 55		3000	1860	
		3.6 NM	0.7 NM	1 NM
CATEGORY	A	B	C	D
S-ILS 8	1474-½ 200 (200-½)			
S-LOC 8	1640-½	366 (400-½)	1640-⅝	366 (400-⅝)
CIRCLING	1740-1	463 (500-1)	1740-1½	1840-2
			463 (500-1½)	563 (600-2)