


VOR/DME GEE	APP CRS	Rwy Idg	N/A
108.2	085°	TDZE	N/A
Chan 19		Apt Elev	814

VOR-A

CANANDAIGUA (IUA)

DME or RADAR required.	MISSED APPROACH: Climb to 2000 then climbing right turn to 3500 direct GEE VOR/DME and hold.
When local altimeter setting not received, use Rochester altimeter setting and increase all MDAs 100 feet and Circling visibility all Cals ¼ SM, increase WIVRI Fix Circling minimums visibility Cat C ½ SM.	

AWOS-3P	ROCHESTER APP CON	UNICOM
118.675	119.55 269.6	122.8 (CTAF) 0

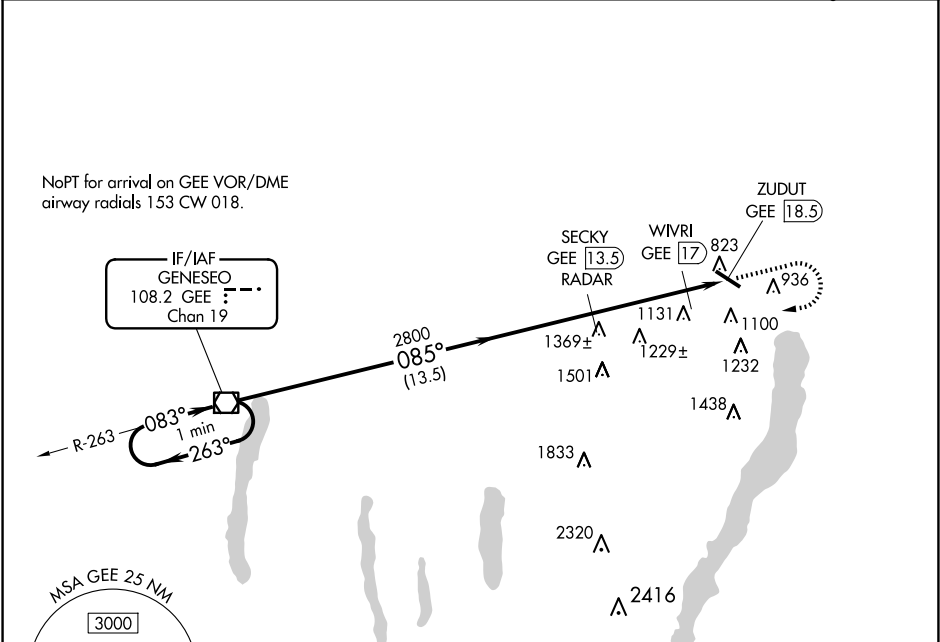

2307  $\Delta$

CATEGORY	A	B	C	D
CIRCLING	1580-1	766 (800-1)	1580-2 $\frac{1}{4}$ 766 (800-2 $\frac{1}{4}$ )	NA

WIVRI FIX MINIMUMS				
CIRCLING	1500-1	686 (700-1)	1540-2 726 (800-2)	NA

MIRL Rwy 13-31   
REIL Rwy 13 and 31

FAF to MAP 5 NM						
Knots	60	90	120	150	180	
Min:Sec	5:00	3:20	2:30	2:00	1:40	