


▼

▲ NA


Baro-VNAV NA. DME/DME RNP-0.3 NA. Use Gadsden altimeter setting, when not received, use Anniston altimeter setting and increase all DA/MDA 20 feet.




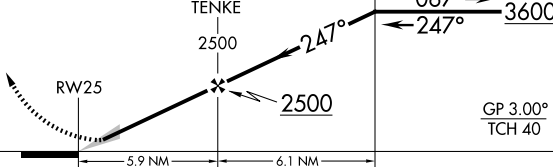
MISSED APPROACH: Climb to 1500 then climbing right turn to 3600 direct WEBIL and hold.

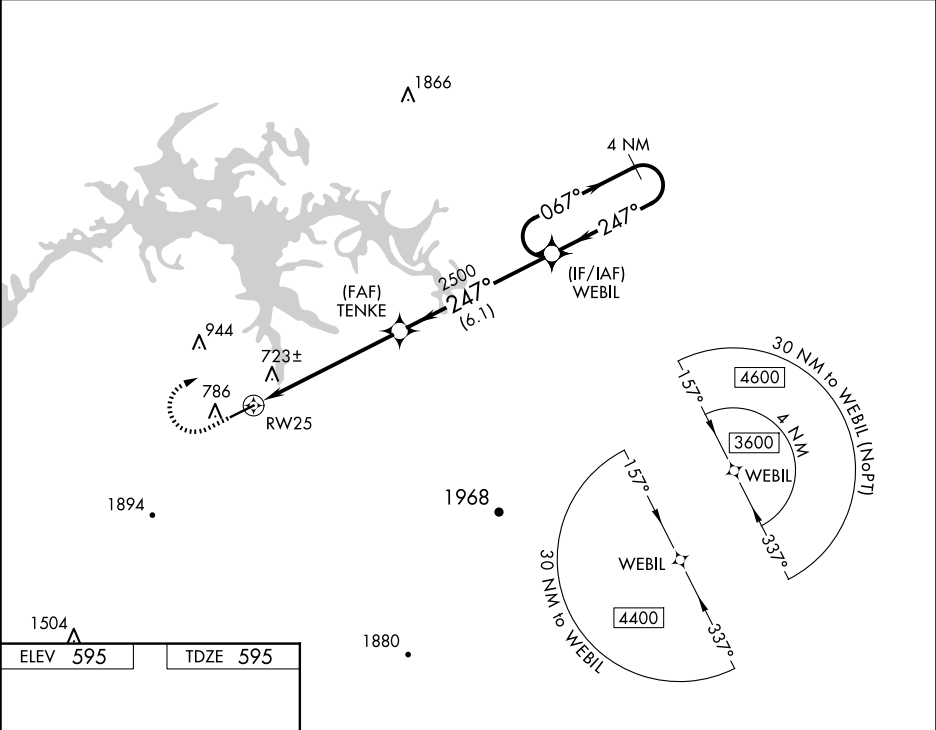GAD AWOS-3PT 127.825	ATLANTA CENTER 124.5 270.325	CTAF 122.90
-------------------------	---------------------------------	----------------

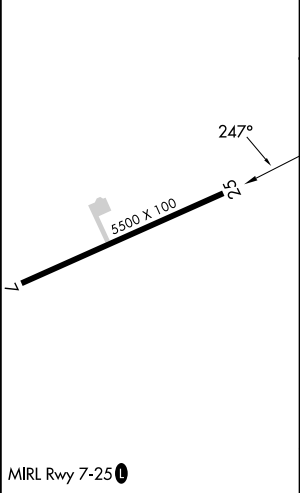

ELEV 595	TDZE 595
----------	----------



1500	3600	WEBIL	4 NM Holding Pattern	
				
				
CATEGORY	A	B	C	D
LPV DA	856-7 <sup>8</sup> / <sub>8</sub> 261 (300-7 <sup>8</sup> / <sub>8</sub> )			
LNNAV/VNAV DA	1064-1 <sup>5</sup> / <sub>8</sub> 469 (500-1 <sup>5</sup> / <sub>8</sub> )			
LNNAV MDA	1180-1 585 (600-1)	1180-1 <sup>3</sup> / <sub>4</sub> 585 (600-1 <sup>3</sup> / <sub>4</sub> )		
CIRCLING	1180-1 585 (600-1)	1360-2 <sup>1</sup> / <sub>4</sub> 765 (800-2 <sup>1</sup> / <sub>4</sub> )		2260-3 1665 (1700-3)