


APP CRS	Rwy Idg	3000
256°	TDZE	7
	Apt Elev	7

RNAV (GPS) RWY 28  
MIAMI HOMESTEAD GENERAL AVIATION (X51)

<div><div>▼</div><div>▲ NA</div></div> <div>When local altimeter setting not received, use Miami Exec altimeter setting and increase all MDAs 40 feet. DME/DME RNP-0.3 NA.</div>	MISSED APPROACH: Climb to 500, then climbing right turn to 2000 direct HOLMU and hold.
--	--

AWOS-3 118.375	MIAMI APP CON 125.5 354.1	UNICOM 122.8 (CTAF)
-------------------	------------------------------	------------------------

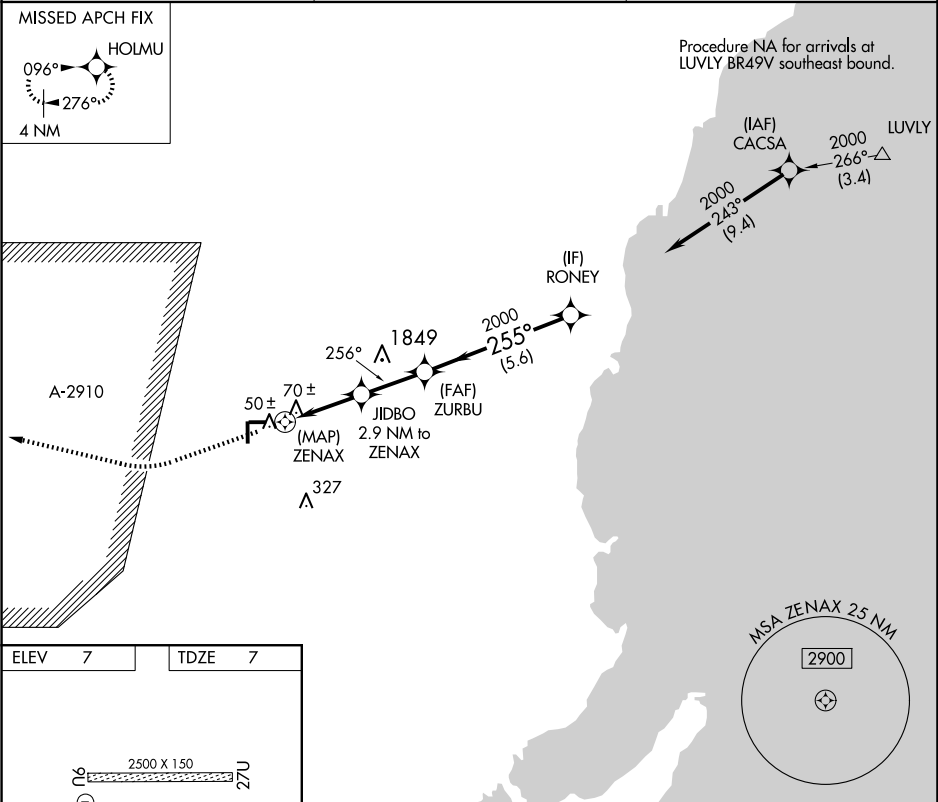

500	2000	HOLMU	VGSI and descent angles not coincident.		Procedure Turn NA
<div><div>ZURBU</div><div>JIDBO 2.9 NM to ZENAX</div><div>256°</div><div>2000</div><div>3.06°</div><div>TCH 40</div><div>1200</div><div>ZENAX</div><div>0.7</div><div>2.9 NM</div><div>2.4 NM</div><div>5.6 NM</div></div>		<div><div>RONEY</div><div>255°</div><div>2000</div></div>			
CATEGORY	A	B	C	D	
LNAV MDA	320-1	313 (400-1)	NA		
CIRCLING	380-1 373 (400-1)	460-1 453 (500-1)	NA		

SE-3, 07 AUG 2025 to 04 SEP 2025

SE-3, 07 AUG 2025 to 04 SEP 2025